



# Htek IP Phones UC902 User Manual



**Version 2.0.4.4.29**  
**Mar. 2018**

# Notices Information

## Copyright

Copyright © 2005 - 2018 Nanjing Hanlong Technology CO., LTD. All rights reserved.

Nanjing Hanlong Technology Co., LTD. owns all the rights to modify and copy this document at any time. And all the illustrations and text in this document are copyright protected. Therefore, no parts of this document may be used or reproduced, transmitted by the third parties for any purposes without the express written permission of Nanjing Hanlong Technology CO., LTD.

When this document is made available on [www.htek.com](http://www.htek.com) , Nanjing Hanlong Technology Co., LTD. gives its right to download and print copies of this content only for private use as a user manual. No parts shall have the right to alter, modify or use as commercial means without prior written permission from Nanjing Hanlong Technology Co., LTD.

## Safety Instructions

- To use the Phone, please follow the instructions in this user manual.
- Use the power adapter supplied with your phone. Other power adapters may damage the phone.
- This phone is only for indoor use. And also avoid in high humidity, water and some other liquids.
- Do not use the phone during thunderstorms.
- CE
- FCC

## WEEE Warning



To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately.

## Cleaning

To clean the device, use an anti-static cloth. Please avoid cleaning liquids as they might damage the surface or internal electronics of the phone.

## FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

## Summary of changes

This section describes the changes to this user manual for each release and user manual version.

### Change for Release x.0.4.0.10, Manual version x.0.4.0.10

Major updates have occurred to the following sections:

- [Label Scroll](#)

### Change for Release x.0.4.0, Manual version x.0.4.0

Major updates have occurred to the following sections:

- [IPv6](#)
- [IPv4&IPv6](#)

### Change for Release x.0.3.98.O, Manual version x.0.3.98.O

Major updates have occurred to the following sections:

- [Reboot in Talking](#)

### Change for Release x.0.3.98.A, Manual version x.0.3.98.A

Major updates have occurred to the following sections:

- [Auto Logout Time](#)

### Change for Release x.0.3.98, Manual version x.0.3.98

Major updates have occurred to the following sections:

- [Daylight Saving Time](#)

### Change for Release x.0.3.93, Manual version x.0.3.93

Major updates have occurred to the following sections:

- [Check-Syn With Authenticate](#)
- [Call Back](#)

## Change for Release x.0.3.88, Manual version x.0.3.88

Major updates have occurred to the following sections:

- [Detect IP Conflict](#)

## Change for Release x.0.3.72, Manual version x.0.3.72

Major updates have occurred to the following sections:

- [Voice Mail Tone](#)
- [Backup NTP Server](#)
- [Intercom Barge](#)

## Change for Release x.0.3.65, Manual version x.0.3.65

Major updates have occurred to the following sections:

- [Redial Mode](#)

## Change for Release x.0.3.63, Manual version x.0.3.63

Major updates have occurred to the following sections:

- [Suppress DTMF Display](#)
- [Suppress DTMF Display Delay](#)

## Change for Release x.0.3.62, Manual version x.0.3.62

Major updates have occurred to the following sections:

- [Auto Redial](#)

# Table of Content

Notices Information .....	2
Copyright.....	2
Safety Instructions.....	2
WEEE Warning .....	2
Cleaning.....	3
FCC Statement.....	3
Summary of changes.....	4
Change for Release x.0.4.0.10,Manual version x.0.4.0.10 .....	4
Change for Release x.0.4.0,Manual version x.0.4.0.....	4
Change for Release x.0.3.98.O,Manual version x.0.3.98.O.....	4
Change for Release x.0.3.98.A,Manual version x.0.3.98.A .....	4
Change for Release x.0.3.98,Manual version x.0.3.98.....	4
Change for Release x.0.3.93,Manual version x.0.3.93.....	4
Change for Release x.0.3.88,Manual version x.0.3.88.....	5
Change for Release x.0.3.72,Manual version x.0.3.72.....	5
Change for Release x.0.3.65,Manual version x.0.3.65.....	5
Change for Release x.0.3.63,Manual version x.0.3.63.....	5
Change for Release x.0.3.62,Manual version x.0.3.62.....	5
Table of Content.....	6
Getting Started .....	10
Packing List.....	10
Phone Installation.....	12
1. Attach the phone stand .....	12
2. Connect the Handset and optional Headset.....	12
3. Connect the Network and Power .....	13
Initialization .....	13
Status.....	14
Registration.....	16
Idle Screen.....	19
Getting Familiar with Your Phone.....	20
Hardware Components Preview .....	20
Icon Preview.....	22
LED Instruction.....	23
Power Indicator LED.....	24
Line LED:(Line Key set as Line) .....	24
BLF or BLF List Key LED :( Line/Line Key set as BLF) .....	24
Shared Line LED:.....	24
Other Key Led.....	25
User Interface.....	26
Line Key Function Overview .....	27

Basic Setting Configuration .....	30
General Settings.....	30
Web Login.....	30
Administrator Password.....	31
Language .....	32
Screen Saver .....	32
Gray Level.....	34
Time and Date.....	34
LED Status Setting .....	39
Key as Send.....	39
Network Setting.....	40
IPv4 .....	40
IPv6.....	43
IPv4&IPv6 .....	44
PC Port .....	45
Contact Setting.....	47
Local Directory .....	47
Remote Phonebook.....	51
LDAP Phonebook.....	51
Search Contact.....	53
Call History Setting.....	54
Call History.....	54
Audio setting .....	57
Ring Tone.....	57
Volume .....	59
Voice Mail Tone .....	60
Play Hold Tone .....	60
Play Hold Tone Delay .....	61
System Settings .....	61
Dial Plan.....	61
Dial-Now Timeout .....	62
No Key Entry Timeout.....	63
Emergency Call.....	63
Label Scroll .....	64
Show Missed Calls .....	64
Auto Logout Time .....	65
Reboot in Talking.....	65
Detect IP Conflict.....	65
Redial Mode .....	65
Keypad Lock .....	66
Suppress DTMF Display.....	67
Suppress DTMF Display Delay.....	67
Check-Syn With Authenticate .....	68
Other features settings .....	68

Action URL .....	68
Softkey Layout.....	69
Programmable Key.....	70
Basic Call Features .....	71
Place a Call.....	71
End a Call .....	73
Redial a Call.....	74
Receive a Call.....	74
Incoming Call Show Mode .....	74
Auto Answer .....	75
Call Hold .....	76
Call Transfer.....	76
Call Conference.....	79
Call Forward.....	80
Call Return.....	83
Call Back.....	83
Call Waiting Tone.....	84
Hide Caller ID .....	85
Reject Anonymous .....	86
Call Mute.....	86
DND .....	87
Hot Line.....	87
Auto Redial.....	88
Function Keys Features and Settings .....	88
Line.....	88
Speed Dial.....	89
BLF .....	90
BLF List.....	91
Voice Message .....	92
Direct Pickup.....	94
Group Pickup .....	95
Call Park .....	96
Intercom.....	97
Intercom Barge.....	99
DTMF .....	99
Prefix.....	100
Local Group.....	101
XML Group.....	102
LDAP .....	103
Broadsoft Group.....	103
Conference.....	104
Forward.....	105
Transfer.....	105
Hold .....	106


Group Listening.....	107
DND .....	107
Redial.....	108
SMS .....	108
Send SMS .....	108
Set SMS Line Key .....	109
Record .....	110
URL Record .....	111
Paging.....	111
Shared line.....	112
Public Hold .....	114
Private Hold.....	114
Hot Desking.....	115
ACD .....	116
Zero Touch.....	117
Multicast Paging.....	118
Sending RTP Stream.....	118
Receiving RTP Stream.....	119
Upgrade .....	121
Factory Reset.....	121
Pcap Feature.....	122
System Log .....	123
Upgrade .....	123
Configuration File .....	125
Troubleshooting.....	127
Why is the phone LCD screen blank?.....	127
Why does the phone display“Network Unavailable”? .....	127
Why can't I get a dial tone? .....	127
Where to set the tone? .....	127
How to download XML Configuration?.....	128
How to Import Trusted CA certificate?.....	128
How to Import Server CA certificate?.....	129
How to use Vlan? .....	129
How to use LLDP? .....	130
How to Set LCD and Web GUI? .....	130
How to Upgrade via FTP? .....	130
How to make Ringtone? .....	130
How to use Open VPN? .....	130
Provisioning Guide on Free PBX .....	130
Redundancy Server.....	130
How to Use Auto Provision Phonebook?.....	131
All Documents .....	131

# Getting Started


## Packing List

The package contains the following parts, please check if all the items are not missed:


1. The phone station

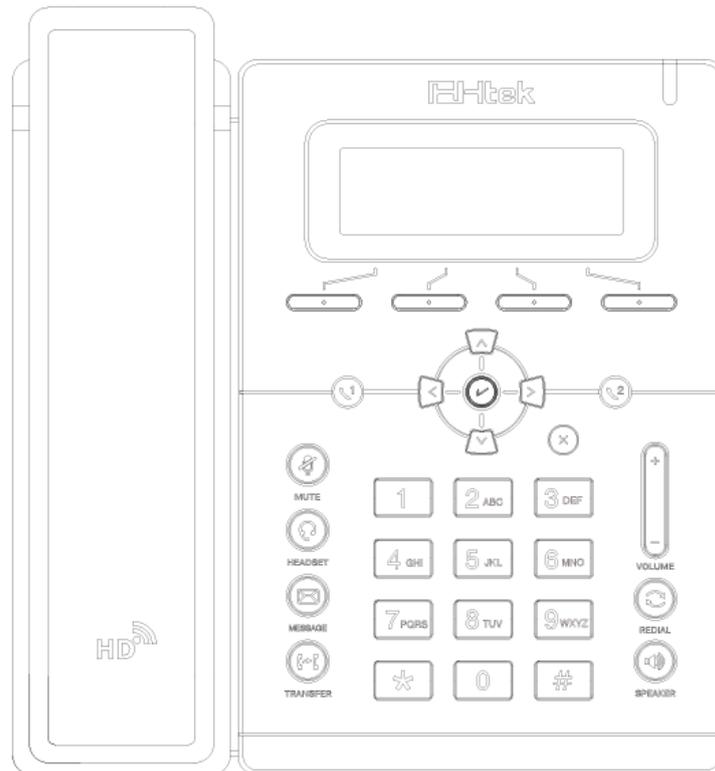


2. The phone stand

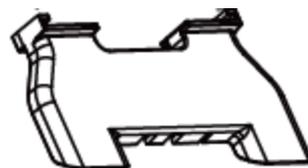


3. Handset




4. Headset cord

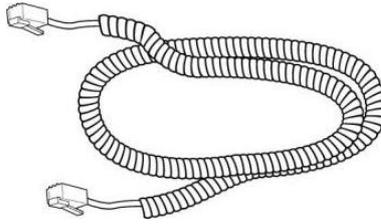


5. Power adapter

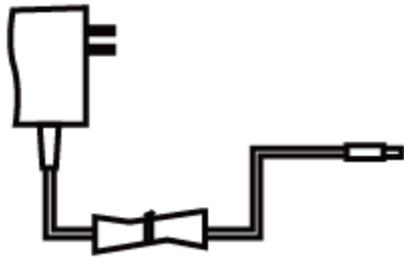

6. Ethernet cable

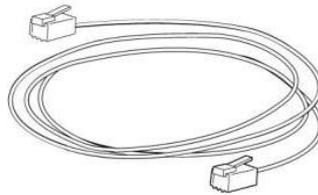


7. User Manual

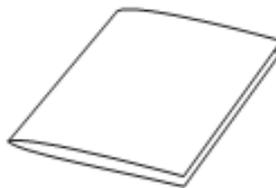


## Phone Installation


### 1. Attach the phone stand

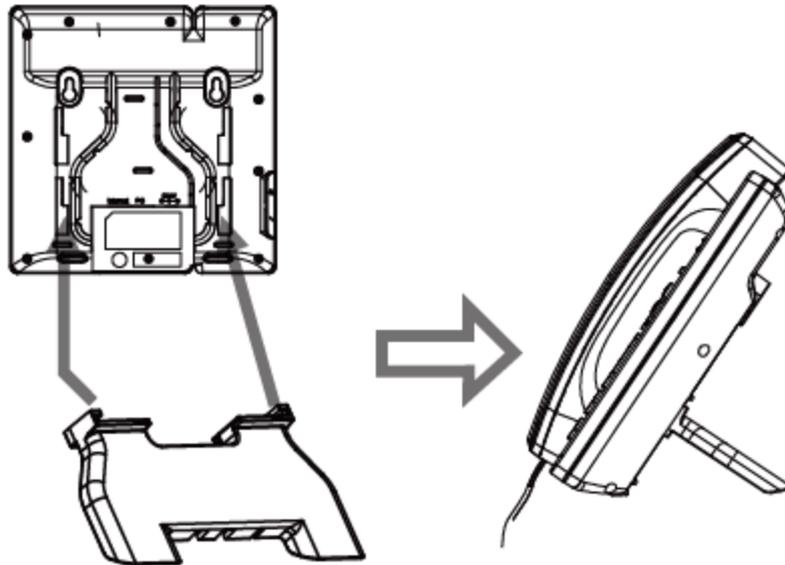

### 2. Connect the Handset and optional Headset

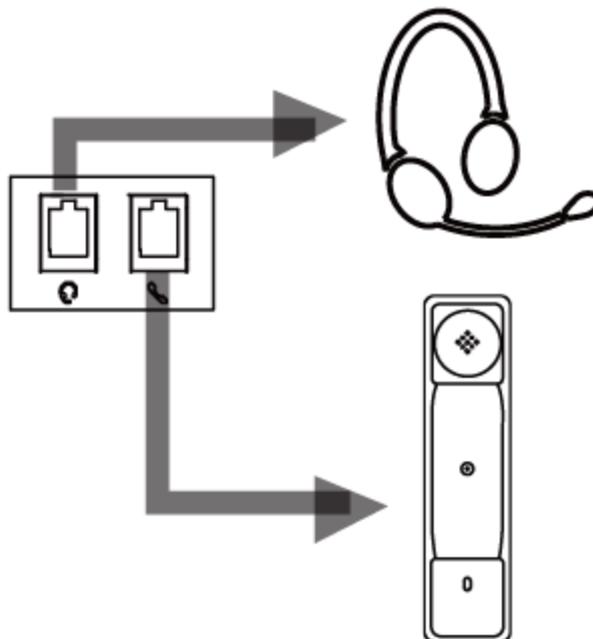

### 3. Connect the Network and Power

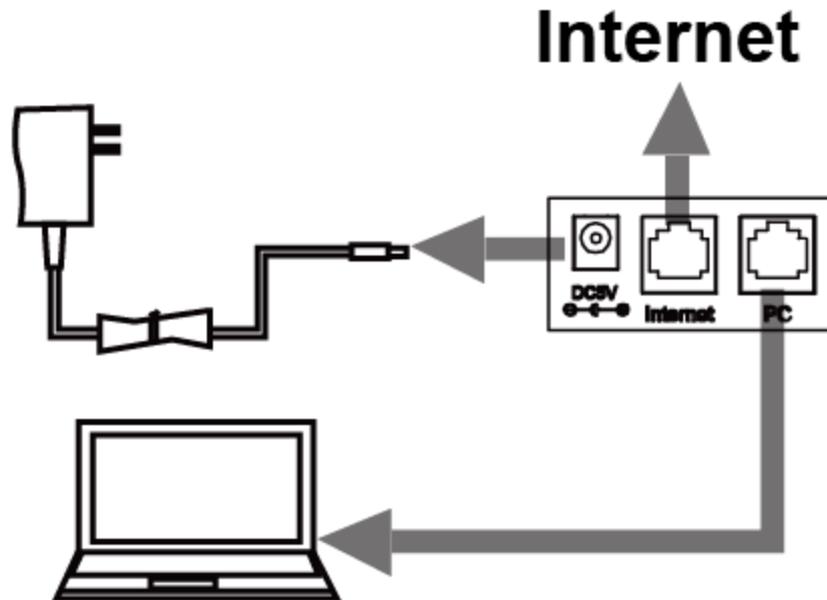


### Initialization

After your phone has been powered up, the system boots up and performs the following steps:

#### Automatic Phone Initialization

The phone finishes the initialization process by loading the saved configuration. The phone LCD screen will display "Booting".

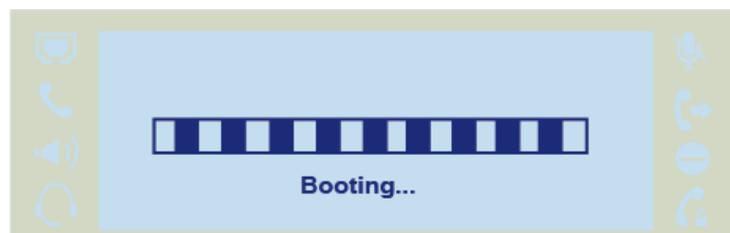

And then show "Initializing" during the initialization.



The IP Phone will upgrade the firmware if there is a new firmware on your server. And the IP Phone will show "Check firmware, please waiting..." after initialization.

**Check firmware  
Please wait**

Then IP Phone will show Reboot information:

**Device Reboot  
Please wait...**

By default, the phone attempts to contact a DHCP server in your network in order to obtain its valid network settings, e.g. IP address, subnet mask, default gateway, DNS server.

## Status

You can view the system status of your phone via phone user interface or web user interface. The information of phone status includes: Information(e.g., Model, IPV4, IPV6, MAC, Firmware, Hardware), Network(e.g., WAN Type, IP, Mask, LAN Type, Gateway, DNS... ), Account (e.g., register status of accounts).

### To view the phone status via Phone interface :

1. Press Menu →Status →Information.

```
1.Model:UC902
2.IPV4:192.168.1.93
Back
```

2. Press Menu →Status →Network.

```
1.IPV4
2.IPV6
Back Enter
```

3. Press Menu →Status →Network→IPV4

```

1.WAN:DHCP mode
2.IP:192.168.1.93
Back
    
```

4. Press Menu →Status →Network→IPV6

```

1.WAN:DHCP mode
2.IP:2015:1fc1:1111:1111:d..
Back
    
```

5. Press Menu →Status →Accounts (UC902 support two accounts).

```

1.530:Registered
2.Empty:Not Registered
Back
    
```

**To view the phone status via Web interface:**

1. Login Web interface(For How to login, please refer to [Web Login](#)).
2. View the information of Version, Account and Network.

The screenshot displays the Htek web interface's 'Status' page. At the top, there is a navigation bar with the Htek logo and menu items: Home, Profile, Account, Network, Function Keys, Setting, Directory, and Management. A 'logout' link is visible in the top right corner. The main content area is titled 'Status' and contains several sections:

- Version:** Product Model: UC902; Firmware Version: BOOT--2.0.4.4(2018-01-20 13:33:00), IMG--2.0.4.4.29(2018-03-05 08:38:00), ROM--2.0.4.4.29(2018-03-05 08:38:00), DSP--9.0.3(Patch 1.0.0).
- Account Status:** Account1: Registered; Account2: Disabled.
- Network:** IP Mode (IPv4/IPv6): IPv4; Device Type: Bridge; MAC Address: 00:1f:c1:1b:e6:a9.
- IPv4 Setting:** WAN Port Type: DHCP; WAN IP Address: 192.168.1.93; Subnet Mask: 255.255.252.0; Gateway: 192.168.0.2; Primary DNS: 192.168.0.2; Secondary DNS.
- Memory Free:** 44580 KB.
- System Up Time:** 4 day(s) 18 hour(s) 49 min(s) 10 sec(s).
- Restart:** A 'Restart' button is present.

A right-hand sidebar contains a 'NOTE' section with the following information:

- Version:** Shows product type and the version of firmware.
- Account Status:** Shows the registered status of accounts.
- Network:** Shows the detail information of WAN port and LAN port.
- System Up Time:** Shows the running time after device power up.
- Restart:** Restart the voip application.

## Registration

### To register via Phone interface :

1. Press Menu→ Setting→ Advanced setting (default password: admin)→ Accounts.
2. Select the desired account
3. Select Enable for Account active
4. Select the desired profile of the account.
5. Fill the SIP User ID, Authenticate ID
6. Fill the Password and Name (shown on LCD).
7. Press Save to save the configuration.



### Note:

If there is a port of sip server, you need to press “1” on the keypad, then you will find the “.”.

### Additional Information:

When the current input method is ABC/abc/2ab,

Pressing “1”, you will find “, . ?;”.


Pressing “0”, you will find “ < >(){}[]”.

Pressing “\*”, you will find “\*/!@\$”.

Pressing “#”, you will find “#’%&\*”.


### To register via Web interface :

1. Login Web interface and Click Profile→ Basic.

2. Fill the Primary SIP Server and other profile information.
3. Select the SIP Transport.
4. Click  to save the configuration.
5. Click Account→ Basic.




## Idle Screen

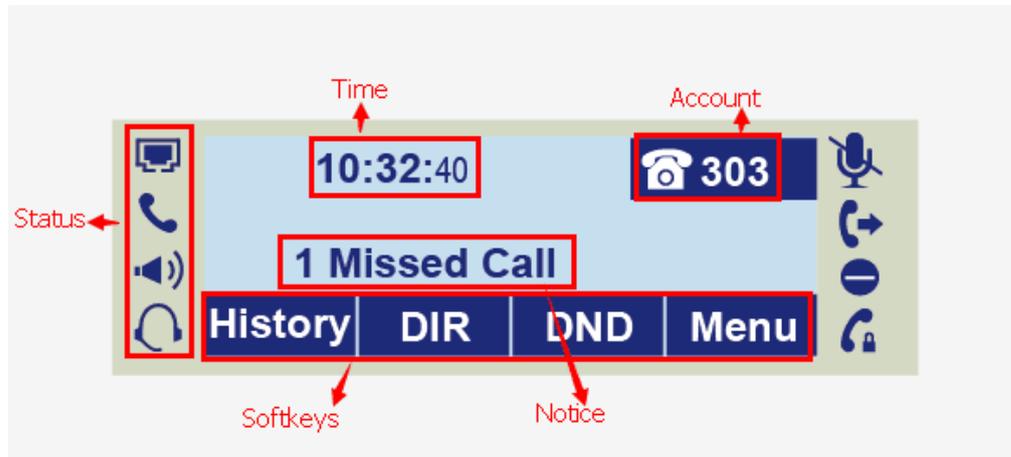

Name	Description
1. Date & Time	It is the area that displays the current set date and time of the phone.
2. Notice	It is the area to display the phone's notifications such as missed calls, SMS, do not disturb mode and many more. For more info, see <a href="#">Icon Preview</a> .
3. Line Keys	This area shows the line key labels. Line keys can also be used as other function keys. For more information you can refer to <a href="#">Line Keys</a> .
4. Soft Key	This area shows the soft key labels. The default soft key labels are "History", "Directory", "DND" and "Menu". For more information, see <a href="#">Programmable Key</a> .
5. Default Account	This shows the current account. User can use   to change the default account.

# Getting Familiar with Your Phone

## Hardware Components Preview

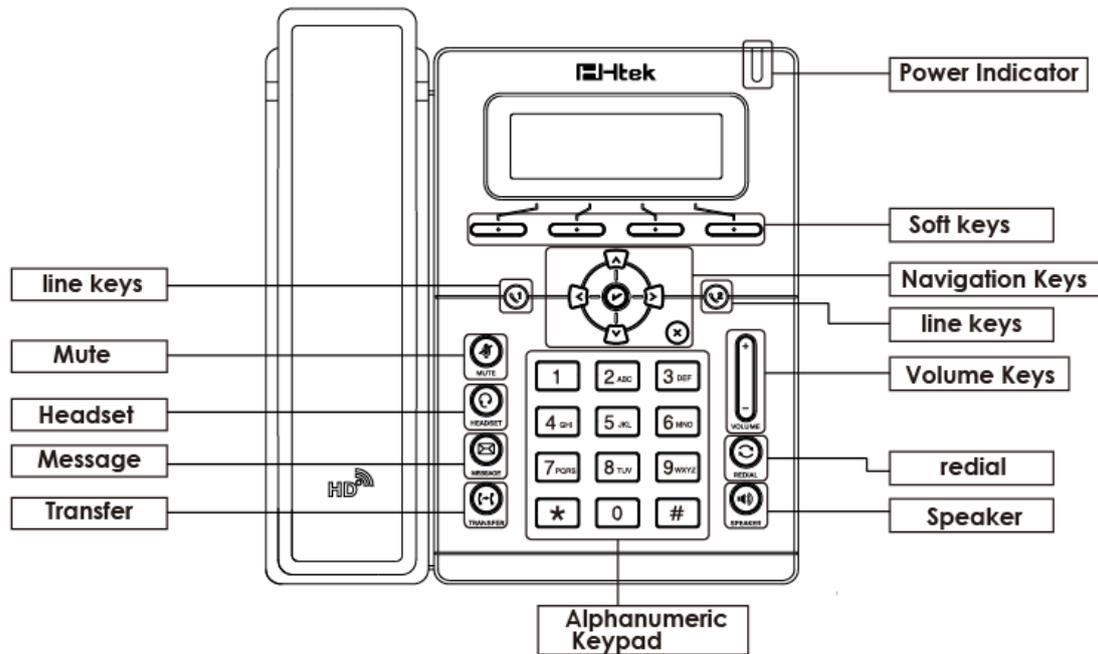

Item	Description
LCD screen	To present all information about the date & time, accounts, soft keys, messages, calls and other some information.
Power Indicator LED	To indicate the power status
Line keys	The phone supports up to 2 accounts. 1. Steady green: idle interface, during a call. 2. Blink red: a call incoming.
Soft keys	Labels automatically identify their context-sensitive features.
Navigation keys	<ul style="list-style-type: none"> <li> 1. OK.</li> <li> <b>Up arrow key:</b> To move up of the selection shown on the screen.</li> <li> <b>Right arrow key:</b> To move right of the selection shown on the screen.</li> <li> <b>Left arrow key:</b> To move left of the selection shown on the screen.</li> <li> <b>Down arrow key:</b> To move down of the selection shown on the screen.</li> </ul>

	 <ol style="list-style-type: none"> <li>1. To return to idle screen.</li> <li>2. To cancel the information or call on the screen.</li> </ol>
<p>Mute key</p>	 <ol style="list-style-type: none"> <li>1. To mute the voice during the call.</li> <li>2. To un-mute the call.</li> </ol>
<p>Line Keys</p>	<p>To be configured as different function as:</p> <ol style="list-style-type: none"> <li>1. Line</li> <li>2. Speed Dial</li> <li>3. BLF</li> <li>4. BLF List</li> <li>5. Voice Mail</li> <li>6. Direct Pickup</li> <li>7. Group Pickup</li> <li>8. Call Park</li> <li>9. Intercom</li> <li>10. DTMF</li> <li>11. Prefix</li> <li>12. Local Group</li> <li>13. XML Group</li> <li>14. LDAP</li> <li>15. Network Directories</li> <li>16. Conference</li> <li>17. Forward</li> <li>18. Transfer</li> <li>19. Hold</li> <li>20. DND</li> <li>21. Redial</li> <li>22. Call Return</li> <li>23. SMS</li> <li>24. Record</li> <li>25. URL Record</li> <li>26. Paging</li> <li>27. Group Listening</li> <li>28. Public Hold</li> <li>29. Private Hold</li> <li>30. Hot Desking</li> <li>31. ACD</li> <li>32. Zero Touch</li> <li>33. URL</li> <li>34. Network Group</li> <li>35. Multicast Paging</li> <li>36. Group Call Park</li> <li>37. CallPark Retrieve</li> </ol>

	<p>38. Pull Call</p> <p>39. Shared Line          The LED lights status when set as Shared line:          Stay green: Idle          Stay red: Busy          Blinked green: Ring Back          Blinked red: A call incoming          Steady orange: During a call          Blinked orange: Public Hold          Blinked green: Private Hold          Light Drown: Unregistered</p> <p>40. Broadsoft group</p>
Speaker	 Press this button to place a call in hands-free mode.
Redial	 <p>To dial the previous dialed number.          To act as send key.</p>
Volume	 To decrease the volume.  To increase the volume.
Alphanumeric keypad	To enter the phone numbers, letters and so on.
Headset	 To indicate that the phone is or not in Headset mode.
Transfer	 <p>To transfer a call to a third party.          To enable or disable Forward feature during the idle page.</p>
Message	 To indicator the New message, and press to read.

### Icon Preview

Icon	Description
	Network

	Line(Registered succeed)
	Line(Unregistered)
	Speakerphone mode
	Handset mode
	Headset mode
	Mute
	Forward
	Do Not Disturb
	SRTP
	Received calls
	Dialed Calls
	Missed calls
	Forward calls

## LED Instruction

This part mainly instructs the LED status. The Power LED Status describes on the premise that the LED settings all set as Yes. For LED status setting, please refer to: [LED Status Setting](#)

## Power Indicator LED

LED Status	Description
Blinked Green	Ringling or have missed call
Steady Green	Idle status(Power on)
Off	Powered off

## Line LED:(Line Key set as Line)

LED Status	Description
Blinked Green	Hold
Steady Green	Off hook or during a conversation
Blinked Red	Ringling
Off	Idle status

## BLF or BLF List Key LED :( Line/Line Key set as BLF)

LED Status	Description
Steady Green	Idle status for the monitored line
Steady Red	The monitored line is calling or during a call
Blinked red	The monitored line is ringing
Off	All other unknown status

## Shared Line LED:

LED Status	Description
Off	Idle status

Stay green	a member of the SCA group in off-hook status
Stay red	Other member of the SCA group's led status when a member of the SCA group in off-hook status
Blinked green every 500ms	a member of the SCA group in Private hold status.
Stay red	Other member of the SCA group's led status when a member of the SCA group in Private hold status
Blinked green every 500ms	a member of the SCA group in public hold status
Blinked red every 500ms	Other member of the SCA group's led status when a member of the SCA group in public hold status
Blinked green every 500ms	a member of the SCA group in progressing status
Stay red	On other member of the SCA group's led status when a member of the SCA group is in progressing status
Blinked red every 100ms	Alerting
Stay green	a member of the SCA group in active status when there is an incoming call designated for the SCA group
Stay red	Other member of the SCA group's led status when a member of the SCA group in active status

## Other Key Led

Key	Description
Headset Key	When using in headset mode, the led is steady green or the LED is off.
Message Key	Blinked green when there is a new message or the LED is off.
Mute Key	Red when muting the call, or the LED is off.

## User Interface

There are two ways to customize specific configurations on your IP phone:

- The user interface on the IP phone
- The user interface in a web browser on your PC

The hardware components keypad and LCD screen constitute the phone user interface, which allows the user to execute all call operation tasks and basic configuration changes directly on the phone. In addition, you can use the web user interface to access all configuration settings. In many instances, it is possible to use both the phone user interface and the web user interface to operate the phone and change settings. However, in some instances, it is only possible to use the phone or the web user interface.

### Phone interface Overview

Option	
Status	Information
	Network
	Accounts
Features	Call Forward
	Function Keys (Line and Line Key setting) More Key see <a href="#">Line Key Overview</a>
	Key as Send
	Hot Line
	Anonymous Call
	DND
	History Setting
DIR	All Contacts
	Contacts
	BlackList
History	Local History
	Network CallLog
Message	Voice Mail View and Set.
	Text Message View and Set.
Basic Setting	Language
	Time & Date
	Time & Date Format
	DHCP Time
	Ring Tone

	Headset
	Screensaver
	User Mode
	Gray Level
	Font Size
Advanced Setting	Accounts
	Network
	Phone Setting
	Auto Provision
Others	Factory Function
	System Restart
	Device Reboot
	Pcap Feature

## Line Key Function Overview

<a href="#">Line</a>
<a href="#">Speed Dial</a>
<a href="#">BLF</a>
<a href="#">BLF List</a>
<a href="#">Voice Mail</a>
<a href="#">Direct Pickup</a>
<a href="#">Group Pickup</a>
<a href="#">Call Park</a>
<a href="#">Intercom</a>
<a href="#">DTMF</a>

<a href="#">Prefix</a>
<a href="#">Local Group</a>
<a href="#">XML Group</a>
<a href="#">LDAP</a>
Network Directories
<a href="#">Conference</a>
<a href="#">Forward</a>
<a href="#">Transfer</a>
<a href="#">Hold</a>
<a href="#">DND</a>
<a href="#">Redial</a>
<a href="#">Call Return</a>
<a href="#">SMS</a>
<a href="#">Record</a>
<a href="#">URL Record</a>
<a href="#">Paging</a>
<a href="#">Group Listening</a>
<a href="#">Public Hold</a>
<a href="#">Private Hold</a>

Hot Desking

[ACD](#)

Zero Touch

URL

Network Group

[Multicast Paging](#)

Group Call Park

CallPark Retrieve

Pull Call

[Shared Line](#)

[Broadsoft group](#)


# Basic Setting Configuration

This part will mainly introduce the basic configuration as the Time, Language, and Volume...

## General Settings

### Web Login

1. Get the IP address: Press Menu → Status → Information.



2. Input the IP Address in the web browser.
3. Input the user name (default is admin), password (default is admin).
4. Login successfully.

The screenshot shows the Htek web interface. The top navigation bar includes Home, Profile, Account, Network, Function Keys, Setting, Directory, and Management. The main content area is titled 'Status' and contains several sections:

- Version:** Product Model (UC902), Firmware Version (BOOT--2.0.4.4(2018-01-20 13:33:00), IMG--2.0.4.4.29(2018-03-05 08:38:00), ROM--2.0.4.4.29(2018-03-05 08:38:00), DSP--9.0.3(Patch 1.0.0))
- Account Status:** Account1 (Registered), Account2 (Disabled)
- Network:** IP Mode (IPv4/IPv6) (IPv4), Device Type (Bridge), MAC Address (00:1f:c1:1b:e6:a9)
- IPv4 Setting:** WAN Port Type (DHCP), WAN IP Address (192.168.1.93), Subnet Mask (255.255.252.0), Gateway (192.168.0.2), Primary DNS (192.168.0.2), Secondary DNS
- Memory Free:** 44580 KB
- System Up Time:** 4 day(s) 18 hour(s) 49 min(s) 10 sec(s)
- Restart:** A button labeled 'Restart' is present.

On the right side, there is a 'NOTE' section with the following information:

- Version:** Shows product type and the version of firmware.
- Account Status:** Shows the registered status of accounts.
- Network:** Shows the detail information of WAN port and LAN port.
- System Up Time:** Shows the running time after device power up.
- Restart:** Restart the voip application

**Note:**

The PC and phone should be in the same segment.

When registering the accounts in web and the server port is not “5060”, then “SIP Server” should be set as “SIP Server’s IP address: server port”, for example, “192.168.0.122: 5090”.

## Administrator Password

The password is mainly used for login the Web interface or set the advanced settings through Phone interface. And the default password of the administrator is: **admin**.


### To change password via Phone interface


1. Press Menu → Settings → Advanced Setting → password (default admin) → Phone Setting → Set Password.
2. Enter the current PWD (password), new password and confirm the new password.
3. Press Save soft key or  to save the new password.



1. Current PWD:  
2. New PWD:  
Cancel 2aB Delete Save

### To change password via Web interface

1. Management → Password.
2. Fill the value.
3. Click  to save the configuration.

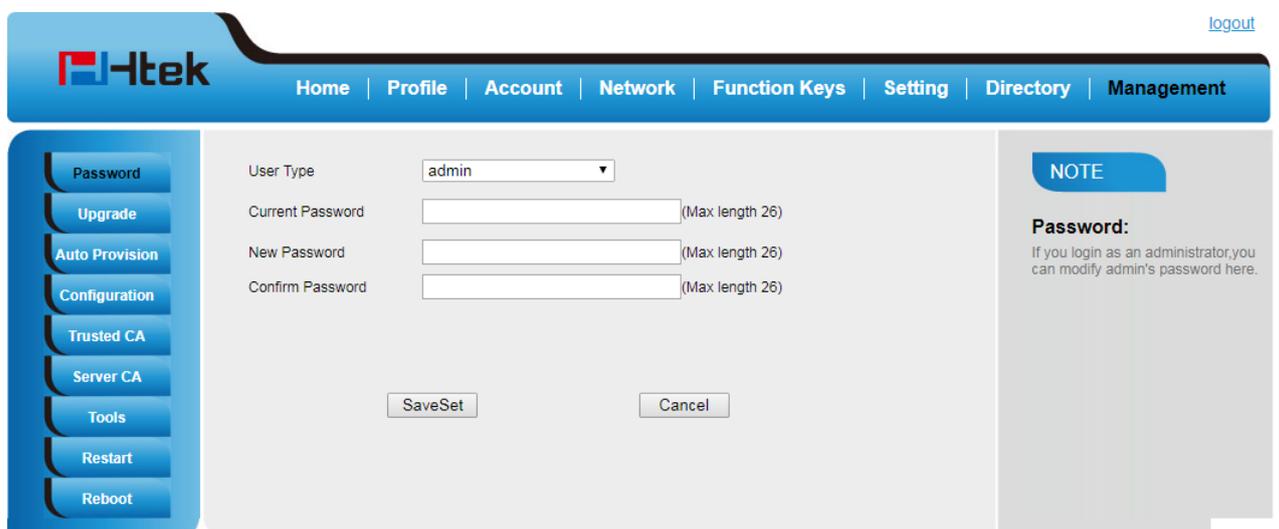

[logout](#)

 Home | Profile | Account | Network | Function Keys | Setting | Directory | Management

**Password**

User Type:

Current Password:  (Max length 26)

New Password:  (Max length 26)

Confirm Password:  (Max length 26)

**NOTE**

**Password:**  
If you login as an administrator, you can modify admin's password here.

**Note:**

When you use the Web interface: user name: admin      password: admin(default)

## Language

The default Phone interface language is English.


### To change the language via Phone interface

1. Press Menu → Settings → Basic Setting → Language.
2. Press  or Save soft key to save the configuration.



### To change the language via Web interface

1. Setting → Preference → Web Language & LCD Language.
2. Select the necessary one.
3. Press  to save the configuration.

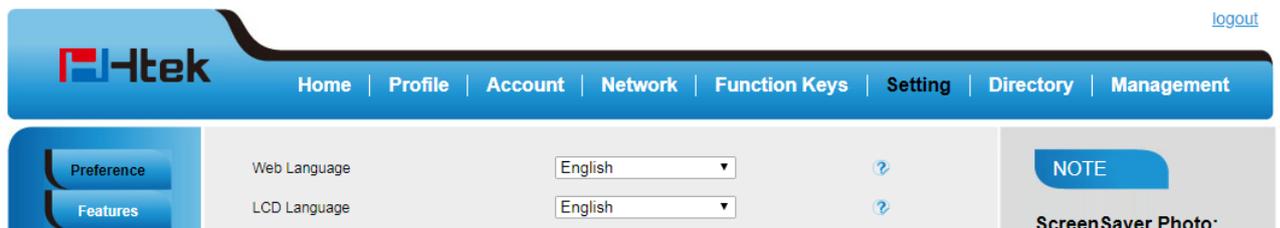**Note:**

All languages may not be available for selection. The available languages depend on the language packs currently loaded to the IP phone.

## Screen Saver

There are two types of screen saver: Logo only, Time & Logo .

### To enable screen saver via Phone interface

1. Press Menu → Settings → Basic Setting → Screensaver...
2. Press  and  or press Info/Switch soft key to Choose the Time-out as 1 min or 2/5/10/30 minute, then press the Save button.
3. Enter the Screensaver Type to choose one of the type: Logo only or Time & Logo.
4. Press  or Save soft key to save the selected configuration.

#### To disable screen saver via Phone interface

1. Press Menu → Settings → Basic Setting → Screensaver...
2. Press  and  or press Info/Switch soft key to Choose the Time-out as off.
3. Press  or Save soft key to save the selected configuration.

#### To Enable screen saver via Web interface

1. To Click Setting → Preference.
2. Choose the Time-out as 1 min or 2/5/10/30 minute.
3. Select the ScreenSaver Type as Logo only or time & logo.
4. Click SaveSet to save the configuration.

Screen Time Out	1 min ▼	
Text Logo	<input type="text"/>	
ScreenSaver Type	time & logo ▼	


#### To Disable screen saver via Web interface

1. To Click Setting → Preference
2. Choose the Time-out as Off
3. Click SaveSet to save the configuration.

Screen Time Out	off ▼	
Text Logo	<input type="text"/>	
ScreenSaver Type	time & logo ▼	

### To custom text logo via Web interface:

1. Click Setting → Preference.
2. Choose the Time-out as 1 min or 2/5/10/30 minute.
3. Enter the desired value in the Text Logo field.
4. Click SaveSet to save the configuration.



### To wake up screen saver via Web interface:

1. Click Setting → Preference
2. Choose Dial First Digit: Screensaver Wakes up or Screensaver Wakes up and Dial
3. Click  to save the configuration.



## Gray Level

There are 20 levels. you can change the LCD's brightness according to your visual perception

### To change the gray level via Phone interface

1. Press Menu → Settings → Basic Setting → Gray level
2. Press  and  or press Info/Switch soft key to Choose the level from 1 to 20
3. Press  or Save soft key to save the selected configuration

## Time and Date

Time and date is displayed on the idle page, and it can be set automatically by SNTP server or manually by manual setting.

### To configure the time and Date by SNTP setting via Phone interface

1. Press Menu → Settings → Basic setting → Time & Date → SNTP Settings
2. Press  or , or Info/Switch soft key to change the Time zone.
3. Fill the NTP server1, NTP Server2, and select the mode of Daylight Saving.

4. Press  or Save soft key to save the configuration.



#### To configure time and date manually via Phone interface

1. Press Menu → Settings → Basic setting → Time & Date → Manual
2. Press  and  or change the right time, or you can input the right time.
3. Press  or Save soft key to save the configuration.


#### To configure the Time & Date Format via Phone interface

1. Press Menu → Settings → Basic setting → Time & Date Format
2. Press  and  to change between 12 Hour or 24 Hour time display.
3. Press  and  to change date display format among Y-M-D(year-month-day), M-D-Y(month-day-year), D-M-Y(day-month-year)..
4. Press  or Save soft key to save the configuration.

#### To configure the DHCP time via Phone interface

1. Press Menu → Settings → Basic setting → DHCP time
2. Press  and  to change between Disable and Enable.
3. Press  or Save soft key to save the configuration.

#### To configure the NTP Server by Web interface

1. Login  
Login name: admin, password: admin (default)
2. Setting → Date & Time → NTP Server
3. Fill the value in the blank.
4. Click  to save the configuration.

Preference  
Features  
BLF Settings  
Date&Time  
Tones  
SMS  
Action URL  
Softkey Layout  
TR069  
SIP

Home | Profile | Account | Network | Function Keys | **Setting** | Directory | Management

logout

DHCP Option 100  No  Yes ?

DHCP Time  No  Yes ?

Time Zone -5 United States-Eastern Time ?

NTP Server is Covered with DHCP  No  Yes ?

**NTP Server** time.windows.com ?

Backup NTP Server ?

SIP Date Override Time  No  Yes ?

Account Account 1 ?

Daylight Saving Time  Disable  Enable  Auto ?

Time Format  24 Hour  12 Hour ?

Date Display Format  Year - Month - Day ?  
 Month - Day - Year ?  
 Day - Month - Year ?

SaveSet Cancel

**NOTE**

**Time Zone:**  
Select the time zone of your location.

**NTP Server**  
The server which is used to synchronize the clock of the phone.

### To change the Time Zone and Date Display Format via Web interface

1. Setting → Date & Time
2. Select the necessary one.
3. Press  to save the configuration.

Preference  
Features  
BLF Settings  
Date&Time  
Tones  
SMS  
Action URL  
Softkey Layout  
TR069  
SIP

Home | Profile | Account | Network | Function Keys | **Setting** | Directory | Management

logout

DHCP Option 100  No  Yes ?

DHCP Time  No  Yes ?

**Time Zone** -5 United States-Eastern Time ?

NTP Server is Covered with DHCP  No  Yes ?

NTP Server time.windows.com ?

Backup NTP Server ?

SIP Date Override Time  No  Yes ?

Account Account 1 ?

Daylight Saving Time  Disable  Enable  Auto ?

**Time Format**  24 Hour  12 Hour ?

Date Display Format  Year - Month - Day ?  
 Month - Day - Year ?  
 Day - Month - Year ?

SaveSet Cancel


**NOTE**

**Time Zone:**  
Select the time zone of your location.

**NTP Server**  
The server which is used to synchronize the clock of the phone.

### To change the SIP Date Override Time via Web interface

1. Setting → Date & Time → SIP Date Override Time
2. Select Yes or No for SIP Date Override Time .
3. Click  to save the configuration.

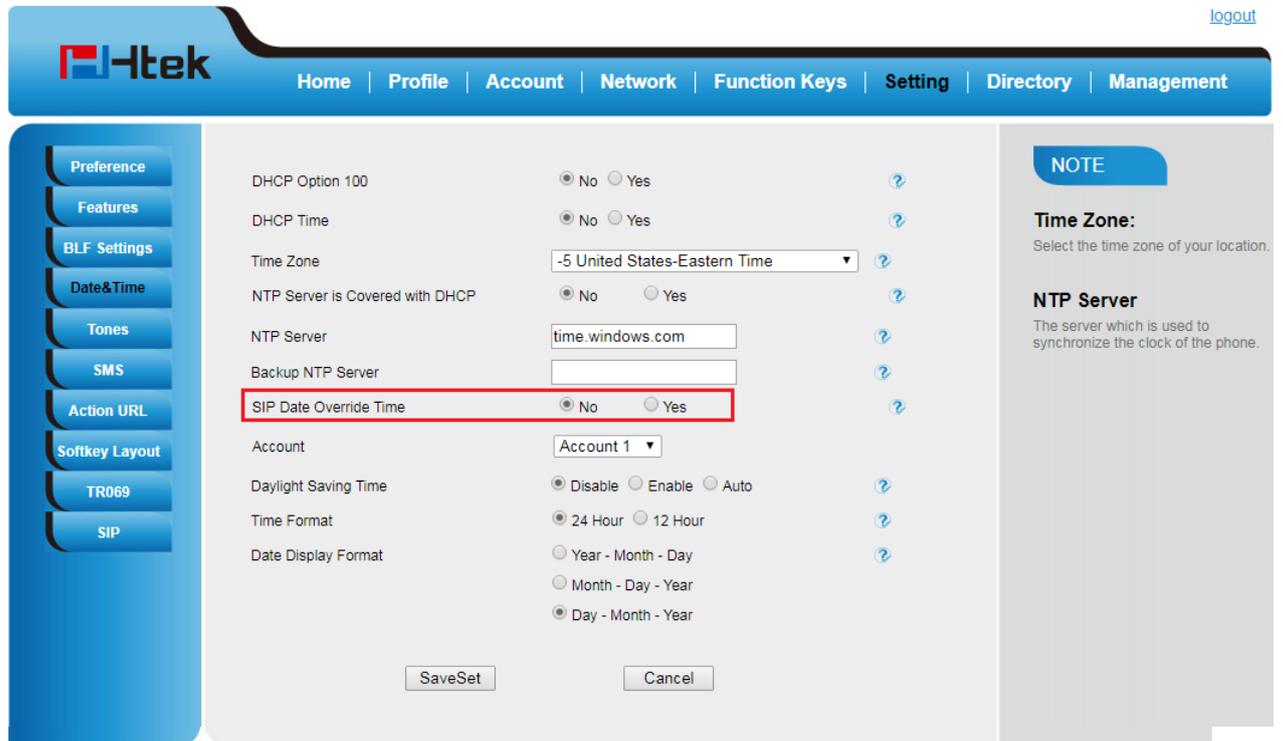

The screenshot shows the Htek web interface with the 'Date & Time' settings page. The 'SIP Date Override Time' option is selected with the 'No' radio button. The 'SaveSet' button is highlighted with a red box. The interface includes a navigation menu on the left with options like Preference, Features, BLF Settings, Date & Time, Tones, SMS, Action URL, Softkey Layout, TR069, and SIP. The main content area lists various settings such as DHCP Option 100, DHCP Time, Time Zone, NTP Server, Backup NTP Server, Account, Daylight Saving Time, Time Format, and Date Display Format. A 'NOTE' section on the right provides information about Time Zone and NTP Server.

### To change the Account via Web interface

1. Setting → Date & Time → Account.
2. Select desired Account.
3. Click  to save the configuration.

The screenshot shows the 'Date & Time' configuration page in the Htek web interface. The left sidebar contains navigation options: Preference, Features, BLF Settings, Date & Time (selected), Tones, SMS, Action URL, Softkey Layout, TR069, and SIP. The main content area lists various settings: DHCP Option 100, DHCP Time, Time Zone (set to -5 United States-Eastern Time), NTP Server is Covered with DHCP, NTP Server (time.windows.com), Backup NTP Server, SIP Date Override Time, Account (set to Account 1), Daylight Saving Time (with a dropdown menu open showing Account 1 and Account 2), Time Format (24 Hour selected), and Date Display Format (Day - Month - Year selected). A red box highlights the 'Account' dropdown and the 'Daylight Saving Time' options. The 'SaveSet' and 'Cancel' buttons are at the bottom.

### To change the Daylight Saving Time via Web interface

1. Setting → Date & Time → Daylight Saving Time
2. Select Disable or Enable or Auto for Daylight Saving Time.
3. Click  to save the configuration.

This screenshot shows the same 'Date & Time' configuration page as above, but with the 'Daylight Saving Time' radio buttons selected. The 'Disable' radio button is selected. A red box highlights the 'Daylight Saving Time' section, which includes the 'Account' dropdown (set to Account 1) and the 'Disable', 'Enable', and 'Auto' radio buttons. The 'SaveSet' and 'Cancel' buttons are at the bottom.

**Note:**

If the IP Phone cannot obtain the time and date from the Simple Network Time Protocol (SNTP) server, please contact your system administrator for more information.

**Daylight Saving Time**

Daylight Saving Time (DST) is the practice of temporary advancing clocks during the summertime so that evenings have more daylight and mornings have less. Typically, clocks are adjusted forward one hour at the start of spring and backward in autumn. Many countries have used the DST at various times, details vary by location. The DST can be adjusted automatically from the time zone configuration. Typically, there is no need to change this setting.

## LED Status Setting

The LED Status setting mainly defines the power indicator LED.

**To configure LED Status via Web interface :**

1. Click Setting → Preference
2. Select Yes or No for Power Status, Ringing Status, Miss Calls Status and Voice Message Status.
3. Click  for the setting.

For the LED status description, see: LED Instruction [Power Indicator LED](#)

LED Status Setting:		
Power Status	<input checked="" type="radio"/> Yes	<input type="radio"/> No
Ringing Status	<input checked="" type="radio"/> Yes	<input type="radio"/> No
MissCalls Status	<input type="radio"/> Yes	<input checked="" type="radio"/> No
Voice Message Status	<input type="radio"/> Yes	<input checked="" type="radio"/> No

## Key as Send

**To configure Key as Send via Phone interface**

1. Press Menu → Features → Key as Send

2. Press  and  or press Info/Switch soft key to select the enable choice.
3. Press  or Save soft key to save the configuration

#### To cancel # Key as Send via Phone interface


1. Press Menu → Features → Key as Send
2. Press  and  or press Info/Switch soft key to select the disable choice.
3. Press  or Save soft key to save the configuration.

## Network Setting

Htek IP Phone supports IPv4、IPv6、IPv4&IPv6.They have three mode of Network: DHCP, Static, and PPPoE. The default mode is DHCP, it will obtain IP address and other information automatically.

If your phone cannot contact a DHCP server for any reason, you need to configure a static IP address manually.

When switch DHCP, Static IP and PPPoE to each other, or change the Static IP on Web interface, it will show the warning of restart as following.

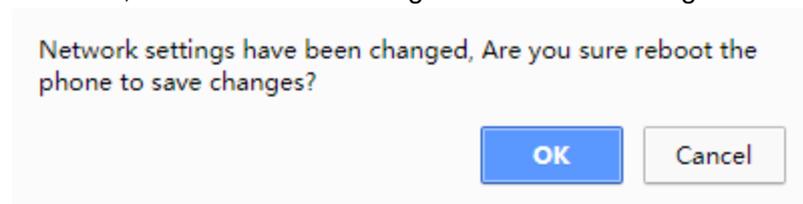


## IPv4

If you set IP Mode to IPv4,IP phone will use IPv4 address. IPv4 has three network modes: DHCP, Static, and PPPoE


#### To configure IPv4 via Phone interface:

1. Press Menu→ Settings→ Advanced Setting (password: admin) → Network→ WAN Port → IP Port Mode.
2. Press  or  to change the IP Port Mode..
3. Press  or Save soft key to save the configuration.



**To configure IPv4 via Web interface:**

1. Click Network→ Basic→ Internet Port
2. Select IPv4 for Internet Port
3. Click  for the setting.

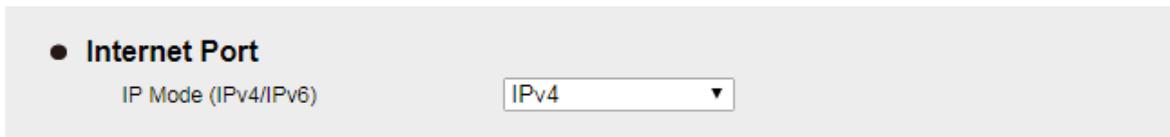

**To configure DHCP via Phone interface:**


1. Press Menu→ Settings→ Advanced Setting (password: admin) → Network→ WAN Port → IPv4→ DHCP mode.
2. Click Save and restart the phone.

**To configure a static IP address via Phone interface:**

1. Press Menu→ Settings→ Advanced Setting (password: admin) → Network→ WAN Port → IPv4 → Static mode.
2. Enter the parameters: IP, Netmask, Gateway, Pri.DNS(primary DNS), Sec.DNS (secondary DNS) in the corresponding fields.



3. Click Save and restart the phone.

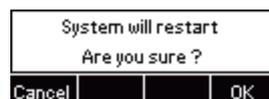

4. Press the Save soft key to accept the change or the Cancel soft key to cancel. If you are using an xDSL modem, you can connect your phone to the Internet via PPPoE mode. You can set a WAN port to be a PPPoE port. The PPPoE port will perform a PPP negotiation to obtain the IP address. Contact your system administrator for the PPPoE user name and password.

**To configure PPPoE via Phone interface:**

1. Press Menu→ Settings→ Advanced Setting (password: admin) → Network→ WAN Port → PPPoE mode.
2. Enter the User ID and password
3. Click Save and restart the phone.

```
1.User ID:02584685230
2.Password:*****
Cancel 2aB Delete Save
```

**To configure Network via Web interface:**

1. Click Network→ Basic→ IPv4 setting
2. Select the desired Type: DHCP, Static or PPPoE
3. Filled the necessary information.
4. Click the SaveSet and restart the phone.

The screenshot shows the Htek web interface for configuring network settings. The top navigation bar includes 'Home', 'Profile', 'Account', 'Network', 'Function Keys', 'Setting', 'Directory', and 'Management'. The left sidebar has 'Basic', 'PC Port', and 'Advanced' tabs. The main content area is titled 'Internet Port' and 'IPv4 Setting'. The 'IPv4 Setting' section is highlighted with a red box and contains the following fields:

- Internet Port**: IP Mode (IPv4/IPv6) dropdown set to IPv4.
- IPv4 Setting**:
  - DHCP** (selected): DHCP HostName, DHCP Domain, DHCP Vendor Class Id, DHCP User Class.
  - Static IP Address**: IP Address, Subnet Mask, Default Gateway, Static DNS (No/Yes), Primary DNS, Secondary DNS.
  - PPPoE**: Account ID, PassWord, Service Name, Preferred DNS Server.

The right sidebar contains a 'NOTE' section with instructions for DHCP, Static IP Address, and PPPoE.

## IPv6


If you set IP Mode to IPv6, IP phone will use IPv6 address. IPv4 has two network modes: DHCP, Static


### To configure IPv6 via Phone interface:

1. Press Menu → Settings → Advanced Setting (password: admin) → Network → WAN Port → IP Port Mode.
2. Press  or  to change the IP Port Mode..
3. Press  or Save soft key to save the configuration.



### To configure IPv6 via Web interface:

1. Click Network → Basic → Internet Port
2. Select IPv6 for Internet Port
3. Click  for the setting.

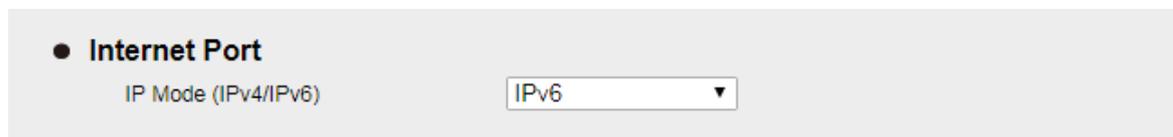

### To configure DHCP via Phone interface:

1. Press Menu → Settings → Advanced Setting (password: admin) → Network → WAN Port → IPv6 → DHCP mode.
2. Click Save and restart the phone.

### To configure a static IP address via Phone interface:

1. Press Menu → Settings → Advanced Setting (password: admin) → Network → WAN Port → IPv6 → Static mode.
2. Enter the parameters: IP, IPV6 Prefix, Gateway, Pri.DNS(primary DNS), Sec.DNS (secondary DNS) in the corresponding fields.

1.IP:J111:4976:13ef:7d49:4fd5  
2.IPv6 Prefix:64  
Cancel 2aB Delete Save

3. Click Save and restart the phone.

System will restart  
Are you sure ?  
Cancel OK

### To configure Network via Web interface :

1. Click Network→ Basic→ IPv6 setting
2. Select the desired Type: DHCP, Static
3. Fill required fields.
4. Click the SaveSet and restart the phone.

**● IPv6 Setting**

DHCP ?

Static IP Address ?

IP Address

IPv6 Prefix (0~128)

Default Gateway

IPv6 Static DNS  No  Yes

Primary DNS

Secondary DNS

SaveSet Restart

## IPv4&IPv6

If you set IP Mode to IPv4&IPv6,IP phone will support both IPv4 and IPv6 address. The settings of DHCP, Static, and PPPoE are same as above.

### To configure IPv4&IPv6 via Phone interface :

1. Press Menu→ Settings→ Advanced Setting (password: admin) → Network→ WAN


Port → IP Port Mode.

2. Press  or  to change the IP Port Mode..
3. Press  or Save soft key to save the configuration.



#### To configure IPv4&IPv6 via Web interface:

1. Click Network→ Basic→ Internet Port
2. Select IPv4&IPv6 for Internet Port
3. Click  for the setting.

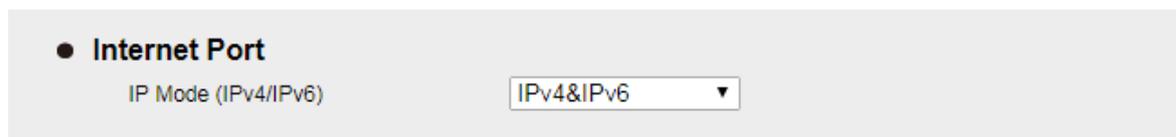

#### Note:

Wrong network parameters may result in inaccessibility of your phone and may also have an impact on your network performance. For more information about these parameters, contact your system administrator.

## PC Port

Two modes for PC port: bridge and router.

#### To configure PC Bridge via Phone interface:


1. Press Menu→ Settings→ Advanced Setting (password: admin) → Network→ PC Port → Bridge mode.
2. Click Save
3. Click the OK button, then the phone will reboot.


#### To configure PC router via Phone interface:

1. Press Menu→ Settings→ Advanced Setting (password: admin) → Network→ PC Port → Router mode.
2. Enter the IP, Netmask and DHCP server
3. Click Save.
4. Click the OK button, then the phone will reboot.

**To configure Bridge via Web interface:**

1. Click Network→ PC Port
2. Select As Bridge
3. Click  and the phone will reboot automatically.

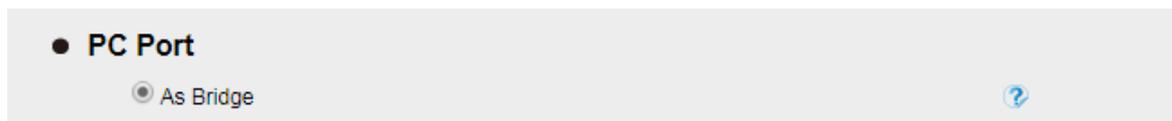**To configure Router via Web interface:**

1. Click Network→ PC Port
2. Select As Router
3. Fill the IP address and other necessary information.
4. Click  and the phone will reboot automatically

● **PC Port**

As Bridge ?

As Router ?

IP Address

Subnet Mask

IP Lease Time

DHCP Server

DMZ IP

**Port Map**

Wan port 0	Lan IP	Lan port 0	Protocol	UDP
Wan port 0	Lan IP	Lan port 0	Protocol	UDP
Wan port 0	Lan IP	Lan port 0	Protocol	UDP
Wan port 0	Lan IP	Lan port 0	Protocol	UDP
Wan port 0	Lan IP	Lan port 0	Protocol	UDP
Wan port 0	Lan IP	Lan port 0	Protocol	UDP
Wan port 0	Lan IP	Lan port 0	Protocol	UDP
Wan port 0	Lan IP	Lan port 0	Protocol	UDP

## Contact Setting

This section provides the operating instructions for managing contacts. The topics include:

- Local Directory
- Remote Phonebook
- LDAP
- Search Contact

### Local Directory

In the directory, you can add or delete your friends, business partner or anyone others' phone No. so you will not forget their number. Or put some anonymous phone No. in the blacklist to prevent from being disturbed. The local Directory can add up to 1000 contacts.

#### A. To add contacts list into local directory

##### To add contacts manually via Phone interface

1. Press Menu → DIR→ Contacts...

2. Press Add soft key




1.Name:  
2.Number:  
Cancel 2aB Delete Save

3. Enter the necessary information as Name, Phone number...
4. Press Save soft key or  to add the contacts successfully.

#### To add contacts from History via Phone interface

1. Press History soft key or press Menu →History→ Local History
2. Press  and  to select the targeted one. (Press  and  switched among the All calls, Dialed calls, Received calls, Missed Calls and Forward Calls).
3. Press Option soft key → Add to Contacts
4. Edit the necessary information as Name, Phone number...
5. Press Save soft key or  to add the contacts successfully.

#### To add contacts via Web interface

1. Click Directory→ Directory
2. Enter the name, number and some other information.
3. Press  and then press  button.

The screenshot shows the Htek web interface for BlackList configuration. At the top, there is a navigation bar with links: Home, Profile, Account, Network, Function Keys, Setting, Directory, and Management. A sidebar on the left contains links for Directory, Remote Phone Book, Call History, LDAP, Network Directory, and MultiCast Paging. The main content area is titled 'BlackList' and features a table with columns: Index, Display Name, Office Number, Mobile Number, Other Number, and Account. Below the table are buttons for 'Save', 'Delete', and 'Move to Contact/blacklist'. A form for adding a contact is visible, with fields for Name (Luisa), Office Number (860), Mobile Number, Other Number, Account (Auto), Ring (Default), Group (Not In Group), and Photo (Auto). There are also buttons for 'Add', 'Edit', and 'Search'. To the right, a 'NOTE' section provides instructions for adding, deleting, moving, and exporting contacts.

**B: To add contacts into blacklist**

**To add blacklist manually via Phone interface**

1. Press Menu →DIR → BlackList
2. Press Group soft key.
3. Press Add soft key.
4. Enter the Name and select the Ring Tone.
5. Press Save soft key or to add the Group successfully.
6. Enter the added Group, then press Add soft key.
7. Enter the necessary information as Name, Phone number...
8. Press Save soft key or to add the contacts successfully

**To add blacklist from history via Phone interface**

1. Press History soft key or press Menu → History → Local History

2. Press  and  to select the targeted one.
3. Press Option soft key → Add to Blacklist
4. Edit the necessary information as Name, Phone number...
5. Press Save soft key or  to add successfully.

### To import or export the contact list

You can manage your phone's local directory via phone or Web interface. But you can only import or export the contact list via Web interface.

#### To import an XML file of contact list via Web interface :

1. Click on Directory → Directory
2. Click Choose file to select a contact list file (file format must be .xml) from your local system.
3. Click Import XML to import the contact list.

#### To export an XML file of contact list via Web interface :


1. Click on Directory → Directory
2. Click Export XML to export the contact list.

#### To import a CSV file of contact list via Web interface :

1. Click on Directory → Directory
2. Click Choose file to select a contact list file (file format must be .csv) from your local system.
3. Click Import Csv to import the contact list.

#### To export a CSV file of contact list via Web interface :

1. Click on Directory → Directory
2. Click Export Csv to export the contact list.

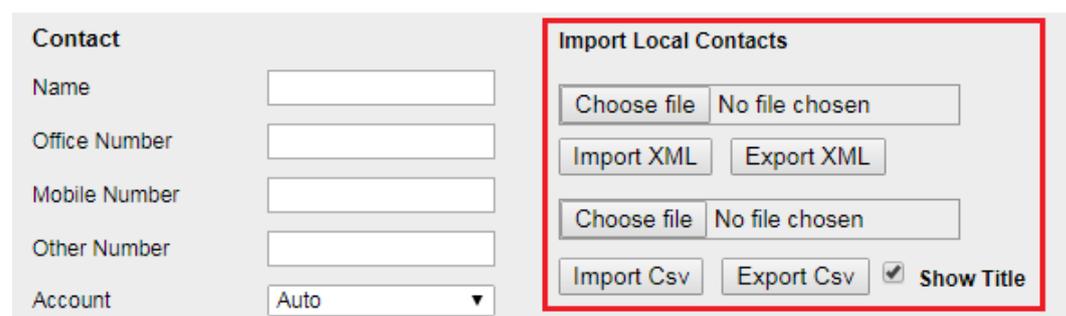


The screenshot displays a web interface for contact management. On the left, there is a 'Contact' form with input fields for Name, Office Number, Mobile Number, and Other Number, and a dropdown menu for Account set to 'Auto'. On the right, a red-bordered box highlights the 'Import Local Contacts' section. This section contains two file selection areas, each with a 'Choose file' button and a 'No file chosen' status. Below these are buttons for 'Import XML', 'Export XML', 'Import Csv', and 'Export Csv'. A checked checkbox labeled 'Show Title' is also present.

**Note:**

If the xml file and CSV file have more than 1000 contacts, the phone will only upload 1000 contacts.

## Remote Phonebook

**To set Remote Phonebook via Web interface:**

1. Login the Web interface and click Directory→ Remote Phone Book
2. Fill the path of the remote file in the Phone Book URL field.  
For example,  
`http://192.168.0.106/Phonebook/Remote_Phonebook/remotephonebook.xml`
3. Fill the Name and then click  to save the configuration.

logout

Home | Profile | Account | Network | Function Keys | Setting | Directory | Management

Directory  
Remote Phone Book  
Call History  
LDAP  
Network Directory  
MultiCast Paging

Index	PhoneBook URL	Name
1	<input type="text" value="http://192.168.0.106/Phonebook/Remote_Pho"/>	<input type="text" value="test"/>
2	<input type="text"/>	<input type="text"/>
3	<input type="text"/>	<input type="text"/>
4	<input type="text"/>	<input type="text"/>
5	<input type="text"/>	<input type="text"/>

Update Time Interval(minutes)

**NOTE**

**Remote Phone Book:**  
Use this feature to download the phone's contact list from the server. You must enter the URL of the phonebook file (e.g: `http://servername.phonebook.xml` - may also use `https://`), and rename the phonebook in the Name field

**To check the contacts via Phone interface:**

Press Directory→ Left Button→ Left Button, and then you can see the item you set, press enter you will find the detail.

For More detail, please refer to: [Remote Phonebook](#) on [www.htek.com](http://www.htek.com) .

**Note:**


Every remote contact only supports 1000 contacts.

## LDAP Phonebook

When use the LDAP feature, you can get the LDAP Phonebook directly.

**To configure LDAP via Web interface:**

1. Login Web interface and click Directory→LDAP
2. Fill the LDAP Name Filter:
  - a) This parameter specifies the name attributes for LDAP searching. The “%” symbol in the filter stands for the entering string used as the prefix of the filter condition.
  - b) For example (cn=%), when the name prefix of the cn of the contact record matches the search criteria, the record will be displayed on the IP PHONE LCD.
3. Fill LDAP Number Filter:

This parameter specifies the number attributes for LDAP searching.
4. Fill Server Address: Fill the domain name or IP address of the LDAP Server.  
For example: 192.168.0.9
5. Port(the port of the LDAP Serve) Base, User Name, Password
6. Max.Hits(1-32000): the maximum number of the search results to be returned by the LDAP server.
7. LDAP Display Name: the display name of the contact record displayed on the LCD screen.
8. Fill the relative value and then click  to save the settings.

Following is the example screenshot for the configuration.

The screenshot shows the Htek web interface for LDAP configuration. The navigation menu on the left includes: Directory, Remote Phone Book, Call History, LDAP, Network Directory, and MultiCast Paging. The main configuration area contains the following fields and values:


LDAP Name Filter	(cn=%)	?
LDAP Number Filter	((telephoneNumber=%)	?
Server Address	192.168.0.9	?
Port	389	?
Base	ou=pbx,dc=pbx,dc=com	?
User Name	cn=admin,dc=pbx,dc=com	?
Password	*****	?
Max.Hits(1~32000)	32000	?
LDAP Name Attributes		?
LDAP Number Attributes		?
LDAP Display Name	cn	?
Search Delay(0~2000ms)		?
Protocol	<input type="radio"/> Version2 <input checked="" type="radio"/> Version3	?
LDAP Lookup For Call	<input type="radio"/> On <input checked="" type="radio"/> Off	?
LDAP Sorting Results	<input type="radio"/> On <input checked="" type="radio"/> Off	?
LDAP Synchronize Time(0~9999mins)		?

At the bottom of the configuration area, there are two buttons: **SaveSet** and **Cancel**. A **NOTE** box is present on the right side of the interface.

### To Configure LDAP Key

#### To configure LDAP Key via Web interface :

1. Click Function Keys→ Line Key→ choose Line Key 2(for example)
2. Select LDAP in the Type field.
3. Click  to save the configuration.

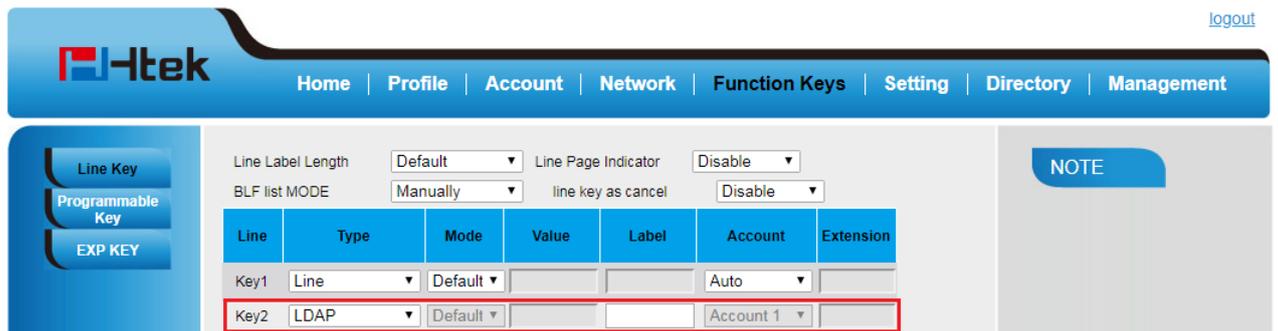

#### To Configure LDAP Key via Phone interface :

1. Press Menu→ Features→ Function Keys→ Line Keys as Function Keys→ Line Key 2
2. Select LDAP in the Type field
3. Press Save or OK key to save the configuration.

When press the LDAP Key the LCD will display as following:



For More detail, please refer to [LDAP Notes](http://www.htek.com) on [www.htek.com](http://www.htek.com)

## Search Contact

You can search contact in all contacts, local contacts, remote contacts and LDAP contact.

#### To search contact in all contacts:

1. Click the Directory soft key on Idle interface.
2. Click the More soft key, then you can see the Search soft key
3. Click the Search soft key, you can enter the desired part of name or part of number.
4. With the search content to match the contact will be automatically displayed on the

LCD within 5 seconds.



**To search contact in Local contacts:**

1. Click the Directory soft key on Idle interface.
2. Click the  button and select the Local contacts list.
3. Click the More soft key, then you can see the Search soft key
4. Click the Search soft key, you can enter the desired part of name or part of number.
5. With the search content to match the contact will be automatically displayed on the LCD within 5 seconds.

**To search contact in Remote contacts:**

1. Click the Directory soft key on Idle interface.
2. Click the  button and select the remote contacts list.
3. Select the desired the Remote Contact and click Enter soft key.
4. Click the Search soft key, you can enter the desired part of name or part of number.
5. With the search content to match the contact will be automatically displayed on the LCD within 5 seconds.

**To search contact in LDAP contacts:**

1. Click the LDAP function key.
2. Enter the first character or more of contact's name or number.
3. Then IP Phone will display the relevant contacts automatically within Search Delay.

## Call History Setting

### Call History

This phone maintains call history lists of Dialed Calls, Received Calls, Missed Calls and Forwarded Calls. The call history list supports up to 100 entries in all on Phone interface and more than 1500 items. You can check the call history, dial a call, add a contact or delete an entry from the call history list. You should enable the history record feature in advance.

**To enable the history record feature via Phone interface:**


1. Press Menu → Features → History Setting
2. Press  and  or Info/Switch soft key to enable History record.

3. Press Save soft key to save the configuration.



**To check the call history via Phone interface :**

1. Press the History soft key. The LCD screen displays All Calls list.
2. Press Right or Left Key to switch among All Calls, Missed Calls, Received Calls, Dialed Calls and Forwarded Calls.
3. Press to select the desired entry.
4. Press the Option soft key, and then select Detail from the prompt list.
5. The detailed information of the entry appears on the LCD screen.



**To delete an entry from the call history list via Phone interface :**

1. Press the History soft key.
2. Press Right or Left Key to switch among All Calls, Missed Calls, Received Calls, Dialed Calls and Forwarded Calls.
3. Press UP or DOWN key to select the desired entry.
4. Press the Delete soft key.

**To delete all entries from the call history list via Phone interface :**

1. Press the History soft key.
2. Press Right or Left Key to switch among All Calls, Missed Calls, Received Calls, Dialed Calls and Forwarded Calls.
3. Press the Option soft key, and then select Delete All from the prompt list.
4. Press the OK soft key.
5. Press the OK soft key to confirm the deleting or the Cancel soft key to cancel.

**To check the call history via Web interface :**

1. Click Directory→ Call History
2. Click Dialed List, Missed List, Received List, Forwarded List then you can see the history list.

logout

Home | Profile | Account | Network | Function Keys | Setting | Directory | Management

Directory

Remote Phone Book

Call History

LDAP

Network Directory

MultiCast Paging

Index	Date	Time	Local Identity	Name	Tel Number
1	07-03-2018	20:42:36	533		<a href="#">533</a>
2	07-03-2018	20:42:32	860		<a href="#">860</a>
3	07-03-2018	01:03:55	532		<a href="#">532</a>

Export XML | Export Csv

NOTE

**To dial a call from Call History via Web interface :**

1. Click Directory→ Call History
2. Select the desired history item, and click Tel Number.
3. Then the call is dialed on phone.

[logout](#)

Htek

[Home](#) | [Profile](#) | [Account](#) | [Network](#) | [Function Keys](#) | [Setting](#) | [Directory](#) | [Management](#)

[Directory](#)  
[Remote Phone Book](#)  
[Call History](#)  
[LDAP](#)  
[Network Directory](#)  
[MultiCast Paging](#)

Dialed List		Missed List		Received List		Forwarded List	
Index	Date	Time	Local Identity	Name	Tel Number		
1	07-03-2018	20:42:36		533	533		
2	07-03-2018	20:42:32		860	860		
3	07-03-2018	01:03:55		532	532		

[Export XML](#)   [Export Csv](#)

NOTE

### To Dial a call from Call History via Phone interface :

1. Press History soft key or press Menu → History → Local History
2. Press and to select the targeted one.
3. Press the Dial soft key, or , or , or the corresponding line key.

## Audio setting

### Ring Tone

You can adjust the type and volume of the ring tone.


#### To adjust the Ring Tone Type via Phone interface

1. Press Menu → Settings → Basic Setting → Ring Tone.
2. Press and to select the aimed one.

3. Press  or Save soft key to save the configuration.



### To adjust the Ring Tone Type via Web interface


1. Setting → Preference → Ring Tones
2. Select the wanted one
3. Click  to save the configuration.



### To configure Distinctive Ring Tone via Phone interface

1. Press Directory
2. Select the target contact
3. Press Detail soft key to edit the contact.
4. Press  and  to select the wanted Ring Tone for the contact
5. Press Save soft key to save the contact.

### To configure Distinctive Ring Tone via Web interface

1. Directory → Directory → Contact
2. Choose the Ring Tone you want to use.
3. Click  →  to save the configuration.

The screenshot shows the Htek web interface for configuring the 'BlackList'. The main content area features a table with the following data:

Index	Display Name	Office Number	Mobile Number	Other Number	Account	
1	Luisa	860			Auto	<input checked="" type="checkbox"/>

Below the table are buttons for 'Save', 'Delete', and 'Move to Contact/blacklist'. The 'Save' button is highlighted with a red box. Below the table is a form for editing contact details, including fields for Name, Office Number, Mobile Number, Other Number, Account, Ring (set to 'Ring2.bin'), Group, and Photo. The 'Ring' dropdown menu is highlighted with a red box. To the right of the form are sections for 'Import Local Contacts' and 'GroupInfo'. A sidebar on the left contains navigation options like 'Directory', 'Remote Phone Book', 'Call History', 'LDAP', 'Network Directory', and 'MultiCast Paging'. A right-hand 'NOTE' section provides instructions for adding, deleting, moving, and exporting contacts.

Click [Ring tone](#) for more information.

## Volume

You can adjust the volume for the phone by the volume keys: and .

### To adjust the Ring tone volume via Phone interface

- Option 1: Press and on the idle page




- Option 2: Press and during the call is ringing.




### To adjust the handset volume via Phone interface

Press and during a call in handset mode.



### To adjust the headset volume via Phone interface

Press and during a call in headset mode.



### To adjust the speaker Volume via Phone interface


Press and during a call in speaker mode.



## Voice Mail Tone

This option can set whether to play the beep for phone's voice mail

1. Click the Setting → Preference
2. Select On or Off for Voice Mail Tone.
3. Click for the setting.



## Play Hold Tone

When you hold the phone, Whether to play hold tone

1. Click the Setting → Preference
2. Set On or Off for Play Hold Tone.

- Click  for the setting.

Play Hold Tone  On  Off

## Play Hold Tone Delay

When you hold the phone. How many seconds to play beep?

- Click the Setting → Preference
- Set the value for Play Hold Tone Delay.
- Click  for the setting.

Play Hold Tone Delay

## System Settings


### Dial Plan


Dial plan is a string of characters that governs the way this phone processes the inputs received from your phone keypad. This phone supports dial plan with following accept digits:

1,2,3,4,5,6,7,8,9,0,\*,#

Grammar	Description
x	any digit from 0-9;
xx+	at least 2 digit number;
^	exclude;
,	hear dial tone;
[3-5]	any digit of 3, 4, or 5;
[147]	any digit 1, 4, or 7;
<2=011>	replace digit 2 with 011 when dialing.

To configure dial plan via Web interface :

1. Click Account →Basic →Dial Plan.
2. Fill the value in dial plan field.
3. Click  to save the configuration.

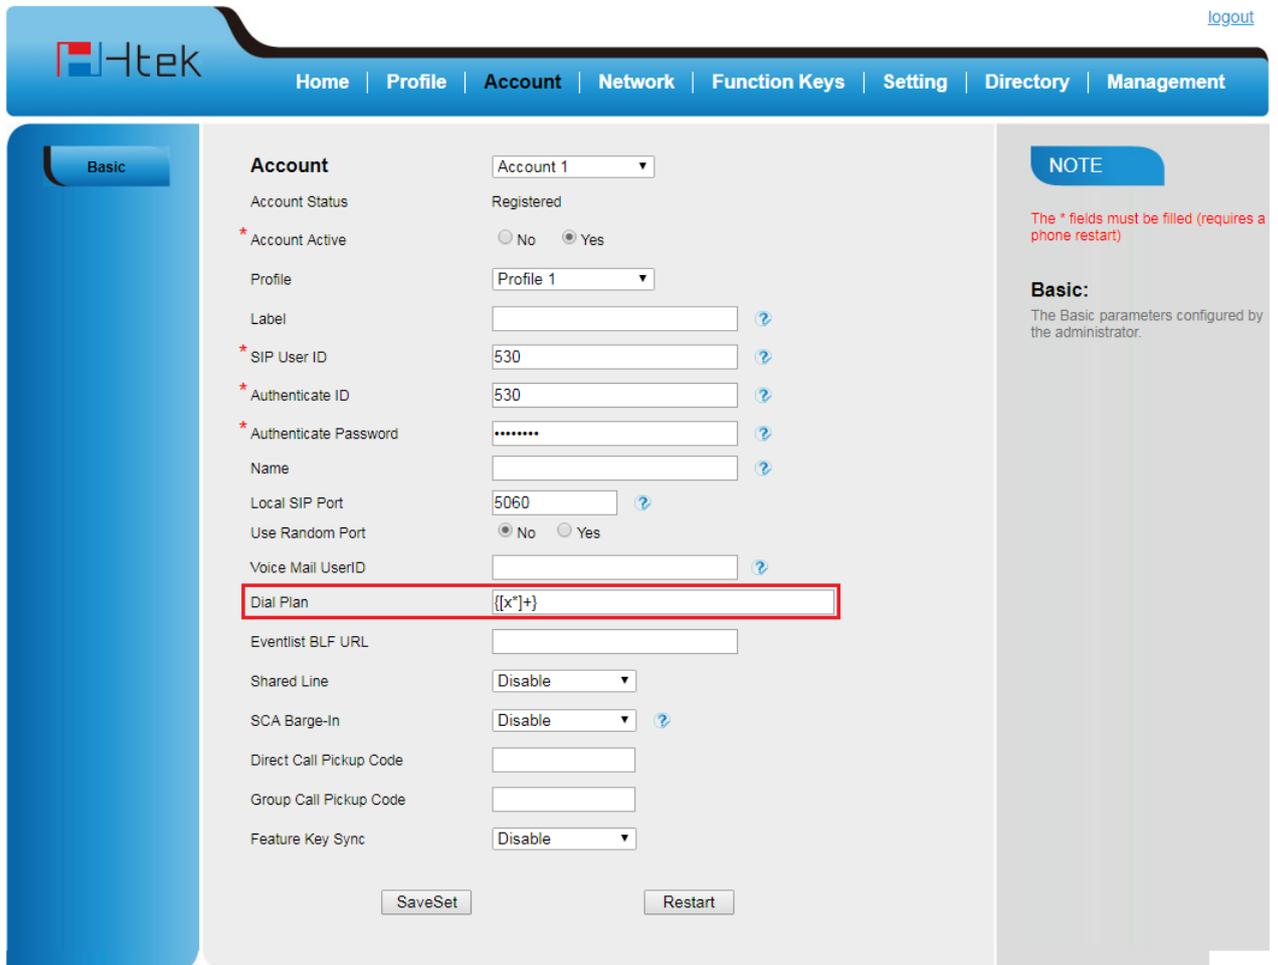

logout

Home | Profile | Account | Network | Function Keys | Setting | Directory | Management

Basic

**Account** Account 1

Account Status Registered

\* Account Active  No  Yes

Profile Profile 1

Label

\* SIP User ID 530

\* Authenticate ID 530

\* Authenticate Password

Name

Local SIP Port 5060

Use Random Port  No  Yes

Voice Mail UserID

**Dial Plan** `{{[x*]+}}`

Eventlist BLF URL

Shared Line Disable

SCA Barge-In Disable

Direct Call Pickup Code

Group Call Pickup Code

Feature Key Sync Disable

SaveSet Restart

**NOTE**

The \* fields must be filled (requires a phone restart)

**Basic:**  
The Basic parameters configured by the administrator.

**Note:**

Illegal input will fall back to default: `{{[x*]+}}`. For More, please refer to [dial plan](http://www.htek.com) on [www.htek.com](http://www.htek.com)

## Dial-Now Timeout

Dial-Now Timeout means that when you enter the number which is matching with dial plan, it will dial out automatically after some time when you stop entering the number.

To configure Dial-Now Timeout via Web interface :

1. Click Web interface Setting → Preference

2. Fill the blank of Dial-Now Timeout: for example, 5(seconds).(0 means dial out immediately).

3. Click the  button to save the configuration



Dial-now Time-out (seconds)  ?

## No Key Entry Timeout

No Key Entry Timeout means that when you enter the number, it will dial out automatically after some time when you stop enter the number.

### To configure No Key Entry Timeout via Web interface :

1. Click Web interface Setting → Preference

2. Fill the blank of No Key Entry Timeout: for example, 5(seconds).0 means never timeout, you should press the send key the dial out the number.

3. Click the  button to save the configuration.



NO Key Entry Timeout(seconds)  ?

## Emergency Call

Public telephone networks in countries around the world have a single emergency telephone number (emergency services number), that allows a caller to contact local emergency services for assistance when required. The emergency telephone number may differ from country to country. It is typically a three-digit number so that it can be easily remembered and dialed quickly. Some countries have a different emergency number for each of the different emergency services.

You can specify the emergency telephone numbers on the IP phone for contacting the emergency services in an emergency situation.

### To configure emergency call via Web interface :

1. Click Setting→ Features→ Phone Lock

2. Enter the emergency services number in the Emergency field

3. Click  to save the configuration.

The screenshot shows the 'Phone Lock' settings page. It includes a 'Keypad Lock' dropdown menu set to 'All Keys', a 'Phone Unlock Pin(0~15digital)' field with six dots, an 'Auto Lock Time-Out(15~3600s)' field with the value '15', and an 'Emergency' field with the value '110,120,119'. The 'Emergency' field and its value are highlighted with a red rectangular border.

## Label Scroll

When setting function keys, you need to set the label of the function keys. If the words are too long to show on the label, you can use this function to make labels scroll. Another approach is to set the labels to long label mode.

### To configure Label Scroll via Web interface :

1. Click the Setting → Preference
2. Select Enable or Disable for Label Scroll.
3. Click  for the setting.

The screenshot shows the 'Label Scroll' settings page. It includes a 'Lable Scroll' dropdown menu set to 'Disable' and a 'Use # As Dial Key' field. The 'Disable' option is highlighted in blue in the dropdown menu.

## Show Missed Calls

Whether to show missed call notification on LCD

### To configure Show Missed Calls via Web interface :

1. Click the Setting → Preference
2. Select Yes or No for Show Missed Calls.
3. Click  for the setting.

The screenshot shows the 'Show Missed Calls' settings page. It includes a 'Show Missed Calls' field with two radio buttons: 'Yes' (selected) and 'No'. There is also a help icon (question mark) next to the 'No' button.

## Auto Logout Time

Set the Web login timeout

1. Click the Setting → Preference
2. Set number 1~5000 min for Auto Logout Time.
3. Click  for the setting.

Auto Logout Time (1 ~ 5000 min)	<input type="text" value="6"/>
---------------------------------	--------------------------------

## Reboot in Talking

This function is to allow reboot during the calls or not

1. Click the Setting → Preference
2. Set Enable or Disable for Reboot in Talking.
3. Click  for the setting.

Reboot in Talking	<input type="text" value="Disable"/>
-------------------	--------------------------------------

## Detect IP Conflict

LCD can display message when IP conflict


1. Click the Setting → Preference
2. Set Enable or Disable for Detect IP Conflict.
3. Click  for the setting.

Detect IP Conflict	<input type="text" value="Enable"/>
--------------------	-------------------------------------

## Redial Mode

Call redial has two ways:(1) To redial the last placed call from the IP Phone (2) To redial the call from all calls list

1. Click the Setting → Preference
2. Set Direct Mode or Select Mode for Redial Mode.
3. Click  for the setting.



## Keypad Lock

### To enable Keypad Lock via Phone interface

1. Press Menu--Settings--Advanced Setting--Phone Setting--Lock
2. Press  and  key or Info or Switch to change selected lock type: All Keys, Menu Key, Function Key, Lock & Answer
3. Press Save or OK key to save the configuration.

### To disable Keypad Lock via Phone interface

1. Press Menu--Settings--Advanced Setting--Phone Setting--Lock
2. Press  and  key or Info or Switch to change to choose Off.
3. Press Save or OK key to save the configuration.

### To enable Keypad Lock via Web interface

1. Click Web interface Setting → Features
2. To choose the Phone Lock.
3. To fill the Phone Unlock Pin and Auto Lock Time-Out
4. Fill the Emergence Number, when the phone is Lock, only Emergency Number can be sent.
5. To click  to save the configuration.

<input type="checkbox"/> Phone Lock	
Keypad Lock	All Keys ▼
Phone Unlock Pin(0~15digital)	.....
Auto Lock Time-Out(15~3600s)	15
Emergency	110,120,119

### To Disable Keypad Lock via Web interface

1. Click Web interface Setting →Features
2. To choose Disable for the Phone Lock.
3. To click  to save the configuration.

## Suppress DTMF Display

In order to ensure safety in Call process, you can choose whether to hide DTMF

1. Click the Setting → Preference
2. Select On or Off for Suppress DTMF Display.
3. Click  for the setting.

Suppress DTMF Display	<input type="radio"/> Off	<input checked="" type="radio"/> On
-----------------------	---------------------------	-------------------------------------

## Suppress DTMF Display Delay


In order to ensure safety in Call process, you can choose whether to hide DTMF

1. Click the Setting → Preference
2. Select On or Off for Suppress DTMF Display Delay.
3. Click  for the setting.

Suppress DTMF Display Delay	<input type="radio"/> Off	<input checked="" type="radio"/> On
-----------------------------	---------------------------	-------------------------------------

## Check-Syn With Authenticate

If this option is enabled, the server needs to be authenticated before the phone agrees to synchronize.


1. Click the Setting → Preference
2. Set Enable or Disable for Check-Syn With Authenticate.
3. Click  for the setting.



## Other features settings

### Action URL

**To configure action url via Web interface :**

1. Click Setting → Action URL
2. Fill the needed values in the designated blank spaces.
3. Click  to save the setting.

Click [Action URL](#) for more how to use, or check on [www.htek.com](http://www.htek.com)

Setting Name	Input Field	Help Icon
Setup Completed	<input type="text"/>	?
Log On	<input type="text"/>	?
Log Off	<input type="text"/>	?
Register Failed	<input type="text"/>	?
Off Hook	<input type="text"/>	?
On Hook	<input type="text"/>	?
Incoming Call	<input type="text"/>	?
Outgoing Call	<input type="text"/>	?
Call Established	<input type="text"/>	?
Call Terminated	<input type="text"/>	?
Open DND	<input type="text"/>	?
Close DND	<input type="text"/>	?
Open Always Forward	<input type="text"/>	?
Close Always Forward	<input type="text"/>	?
Open Busy Forward	<input type="text"/>	?
Close Busy Forward	<input type="text"/>	?
Open No Busy Forward	<input type="text"/>	?
Close No Busy Forward	<input type="text"/>	?
Transfer Call	<input type="text"/>	?
Blind Transfer call	<input type="text"/>	?
Attended Transfer Call	<input type="text"/>	?
Hold	<input type="text"/>	?
Unhold	<input type="text"/>	?

## Softkey Layout

This feature mainly defines which shown on the soft key in some status. For example, what the soft key displays when dialing, or talking.

### To configure Soft key via Web interface :

1. Click Setting→ Softkey Layout
2. Select Enable for Custom Softkey
3. Select Call States.
4. Select the feature form the disable key to enable key field by 

moves the Disable key to Enable field. moves the Enable key, and it will back to Disable field.

5. Click or to change to position or each feature.

6. Click to save the configuration.

**Note:**  
 When there more than 5 items in the Enable field, the last soft key will display More, and last two item will show in the next page soft key, you can check by press more.

## Programmable Key

For the default keys as Soft keys, Navigation keys and so on, you can define them as some specific feature, and it works only on the idle page.

**To configure Programmable Key via Web interface :**

1. Click Function Keys→ Programmable Key

2. Select the desired Key to set.

3. Click **SaveSet** to save the setting.

4. By clicking **Reset To Default**, all setting of the keys will be back to default.

Key	Type	Label	Account	Value
SoftKey1	History		Account 1	
SoftKey2	Directory		Account 1	
SoftKey3	DND		Account 1	
SoftKey4	Menu		Account 1	

Key	Type	Account	Value
Up	History	Account 1	
Down	Directory	Account 1	
Left	Switch Account Up	Account 1	
Right	Switch Account Down	Account 1	
OK	Status	Account 1	
Cancel	N/A	Account 1	
MUTE	N/A	Account 1	
CONF	N/A	Account 1	
TRAN	Forward	Account 1	
HOLD	N/A	Account 1	
Speaker	Speaker	Account 1	
Headset	Headset	Account 1	
VM	VM	Account 1	
Volume Up	Volume Up	Account 1	
Volume Down	Volume Down	Account 1	

Buttons: SaveSet, Restart, Reset To Default

## Basic Call Features

### Place a Call

There are three ways to dialing a call: Handset, Headset and Hands-free speakerphone.


#### To place a call by Handset


1. Pick up the handset, or press a line key and dial the necessary number.
2. Press  or  or press the Send soft key, then the call is sending.

#### To place a call by Headset:

1. Press the 
2. Enter the desired number.
3. Press  or  or press the Send soft key, then the call is sending.

#### Using headset to place and answer calls for all time

1. Click Web interface Setting → Preference
2. HeadSet Priority → Enable
3. Ringer Device For HeadSet → Use Headset
4. Click  to save the setting.
5. Press 

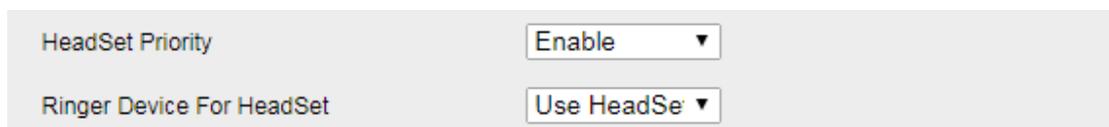

#### Placing a call by hands-free speakerphone

1. Press the , or press the Line key, then you can hear the dial tone.
2. Press the number.
3. Press  or  or press the Send soft key, then the call is sending.

#### To place a call by call history or Directory via Phone interface

1. Press the History /DIR soft key (On the idle page) or Menu → History /Directory
2. Press  and  to select the targeted one.

3. Press the Send soft key, or , or , or the corresponding line key, then the call is sending.

**Note:**

1. The  key is set to be a send key. For more information, refer to the Key as Send on page
2. During the call, you can also change among Headset, Handset or Free-speaker mode.

**Making two calls with one line and one account**

1. Press a line key and dial phone number, then make a call.
2. Press Hold soft key and then press New Call soft key.
3. Dial another phone number,
4. Press the Send soft key, or , then make the second call.

## End a Call

Here shows to end a call during three modes:

**To end a call by Handset**

Press the End Call soft key or hang up the handset, or press .

**To end a call under Headset Mode**

Press the End Call soft key or press , or press .

**To end a call under hands-free speakerphone Mode**

Press the End Call soft key or press , or press .

**Note:**

During the conference, to end the call is same as mentioned above.

## Redial a Call

**To redial the last placed call from the IP Phone :**

Press  directly when LCD is on the idle interface.

## Receive a Call

There are three ways to receive a call when the phone is ringing:

**To receive a call by handset**

Pick up the handset and now the conversation is built.

**To receive a call by headset**

Press  and now the conversation is built.

**To receive a call by hands-free speaker**

1. Option 1: Press  directly.
2. Option 2: Press Answer soft key.
3. Option 3: Press the Line key (flashes red).

Moreover, some other action can be done by soft key when the call is coming.


1. Press the Reject soft key to reject the call. Or press  to reject the current call.
2. Press Forward soft key to forward to another phone.
3. Press Silence soft key, and then the call will keep silent, no ring tone display.


## Incoming Call Show Mode

There are two incoming call show modes for this phone:

1. name and number of the contacts
2. name and number of the incoming call and the account which is connecting

**To set incoming call show mode via Web interface :**

1. Click Setting→ Preference
2. Select the desire mode for the incoming call show mode
3. Click  to save the setting.



Incoming Call Show Mode

Peer Name & Peer Number


Peer Name & Peer Number & Self Name

## Auto Answer

Enable auto answer feature, you will answer all incoming call automatically.

**To enable Auto Answer via Web interface**

1. To Click Profile → Advanced
2. To choose Yes for the Auto Answer.
3. To click SaveSet to save the configuration.

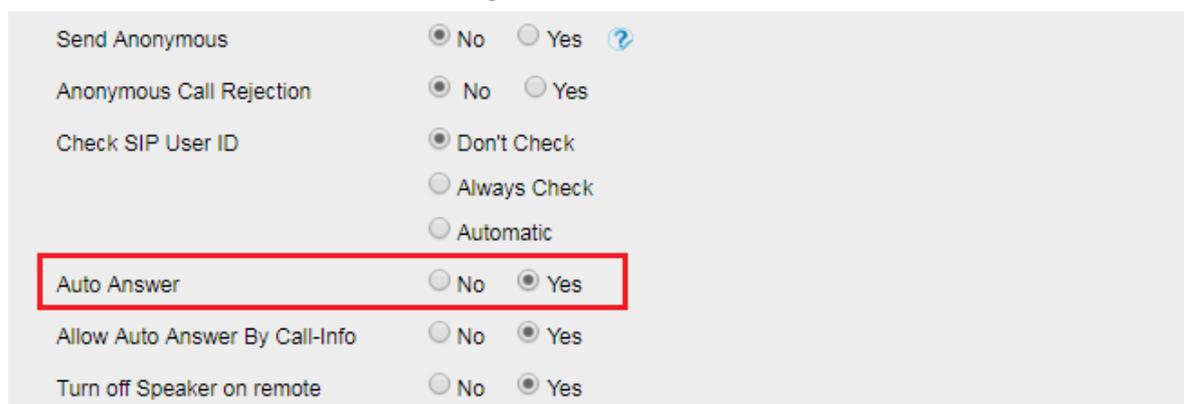

Send Anonymous  No  Yes 

Anonymous Call Rejection  No  Yes

Check SIP User ID  Don't Check

Always Check

Automatic

**Auto Answer  No  Yes**

Allow Auto Answer By Call-Info  No  Yes

Turn off Speaker on remote  No  Yes

**To Disable Auto Answer via Web interface**

1. To Click Profile → Advanced

2. To choose No for the Auto Answer.
3. To click SaveSet to save the configuration.

## Call Hold

When use hold feature, the Hold icon will show on the display.

To make a call on hold during three modes:

### To hold a call under handset mode:

1. Press Hold soft key to hold the current call.
2. Press Resume soft key to resume the call on hold.

### To hold a call under headset mode:

1. Press Hold soft key to hold the current call.
2. Press Resume soft key to resume the call on hold.

### To hold a call during the speaker mode:

1. Press Hold soft key to hold the current call.
2. Press Resume soft key to resume the call on hold.

## Call Transfer

This phone supports blind, attended and Semi-Attended Transfer.

### Blind Transfer

When you use this feature, you can transfer

1. Press Transfer soft key during the conversation, the call is on hold now.
2. Enter the number that transfers to.



3. Press Transfer soft key , and now the blind transfer completed.

### Attended Transfer

When you use this feature, you can

1. Press Transfer soft key during the conversation, the call is on hold now.
2. Enter the number that transfer to, and press the Send soft key or  or .
3. Start the second conversation, press the Transfer soft key, then transfer completed.

#### NOTE:


To transfer calls across SIP domains, SIP service providers must support transfer across SIP domains. Blind transfer will usually use the primary account SIP profile.

### Semi-Attended Transfer

1. Press the Transfer soft key during the conversation, the call is on hold now.
2. Enter the number transfer to, and then press  or , then you can hear the ring tone.
3. Press the Transfer soft key, and now the Semi-attended transfer completed.


### BLF Transfer

1. Set a Programmable Key or line key is set as BLF. For how to set BLF, please refer to [BLF](#)
2. Press the Transfer soft key during the conversation, the call is on hold now.
3. Press BLF key then realize blind, attended and Semi-Attended Transfer. (Webpage--Setting--Features--Transfer Settings)

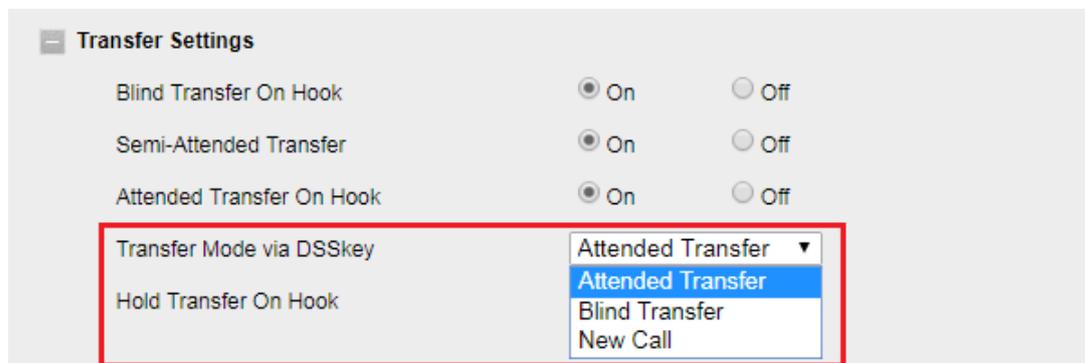


**Hold transfer on hook:**

1. Setting → Features → Transfer Settings: Hold Transfer On Hook: ON.
2. A place a call to B, B answer, A press the hold soft key and place a call to C, A cancel the call when C is ringing or answering, then C and B in the same call and the transfer is successful.

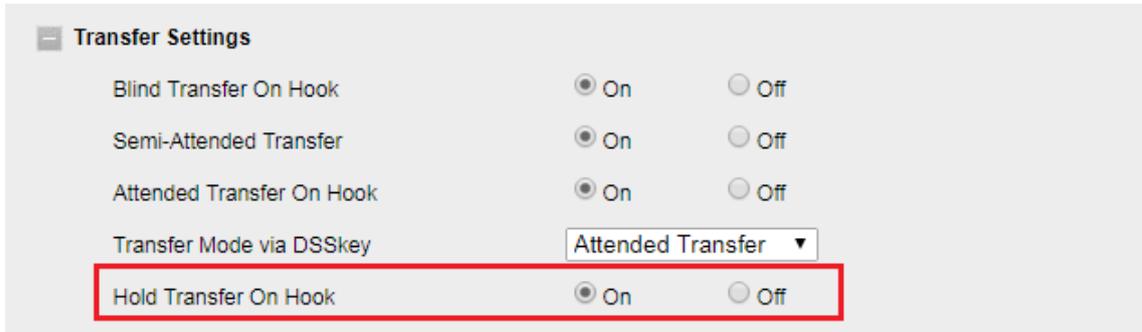**Hold transfer on Three Way conference:**

1. Setting → Preference → Three Way Call Release Type: Transfer.
2. A place a call to B, B answer, A place a call to C again, C answer, A press the Conference soft key then A, B and C will establish meeting.
3. A press the End Call soft key or on-hook to exit the meeting in the process of talking.
4. Then B and C will continue to talk.

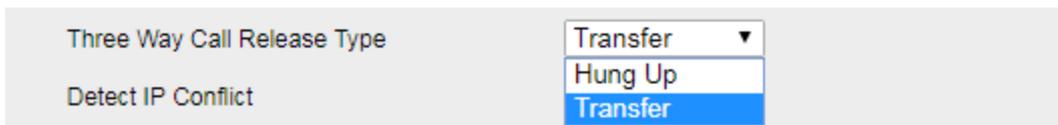**Transfer to New Call via Web interface**

1. Click Setting → Features
2. Select Transfer Mode via DSS key: New Call
3. Select the desired Line Key and select Transfer in the Type.
4. Enter the phone number in the Value field.

**Transfer Settings**

Blind Transfer On Hook  On  Off

Semi-Attended Transfer  On  Off

Attended Transfer On Hook  On  Off

Transfer Mode via DSSkey New Call  
Attended Transfer  
Blind Transfer  
New Call

Hold Transfer On Hook

[logout](#)

Home | Profile | Account | Network | Function Keys | Setting | Directory | Management

Line Key

Programmable Key

EXP KEY

Line Label Length Default Line Page Indicator Disable

BLF list MODE Manually line key as cancel Disable

Line	Type	Mode	Value	Label	Account	Extension
Key1	Line	Default			Account 1	
Key2	BLF	Default	527		Account 1	*04

NOTE

**Note:** if the person that wanted to be spoken to do not want to answer the call, then the person that answered the coming call could use this function.

## Call Conference

This IP Phone supports up to 5-way conference.

### 5-way conference

1. Assuming that call party **A** and **B** are in conversation. **A** wants to bring **C**, **D** and **E** in a conference
2. **A** press the Conference soft key, the call is placed on hold.
3. **A** enter the number of **C** and then press Send soft key or .
4. **C** answer the call.
5. **A** press Conference soft key, then **A**, **B** and **C** are now in a conference.(and now this is **3-way conference**)
6. **A** press the Conference soft key, the current 3-way conference is placed on hold.

7. **A** enter the number of **D** and then press Send soft key or .
8. **D** answer the call.
9. **A** press the Conference soft key, then **A, B, C** and **D** are now in a conference.(and now this is **4-way conference**)
10. **A** press the Conference soft key, the call is placed on hold.
11. **A** enter the number of **E** and then press Send soft key or .
12. **E** answering the call.
13. **A** press the Conference soft key, then **A, B, C, D** and **E** are now the **5-way conference** is built.
14. **A** end the call, the conference is finished.

**Note:**

1. If **C** does not answer the call, **A** can back to continue the conversation with **B**;
2. Once **A** hangs up the call, the conference is ended, while if **B** or **C** drops the call, **A&C** or **A&B** conversation continues.
3. The conference feature is not available on all servers. For more information, contact your system administrator.
4. To realize the 5 way conference, the line should be all available.

## Call Forward

This phone supports static forward (always forward, busy forward and no answer forward) and dynamic forward

### To configure static forward

#### To configure always forward

With this feature, all incoming calls will forward immediately to configured number.

1. Press Menu → Features → Call Forward →Always Forward.

- Press  and  or press Info/Switch soft key to select the enable choice



- Enter the Forward To number.
- Press  or Save soft key to save the configuration.

### To configure busy forward

With this feature, the incoming calls are immediately forwarded if the phone is busy.

- Press Menu → Features → Call Forward → Busy Forward.
- Press  and  or press Info/Switch soft key to select the enable choice.
- Enter the Forward To number.
- Press  or Save soft key to save the configuration.

### To configure no answer forward


No Answer Forward: Incoming calls are forwarded if not answered after some time.


- Press Menu → Features → Call Forward → No Answer Forward.
- Press  and  or press Info/Switch soft key to select the enable choice
- Enter the Forward To number and After Ring Times.
- Press  or Save soft key to save the configuration.

When the Forward feature is enabled, the Forward Icon will display on Status Bar of the LCD.

### To configure Forward via Web interface

- Setting → Features

2. Click On for the Always/Busy/No Answer Forward
3. Fill the Target Number
4. Fill the After Ring Time
5. Click  to save the configuration

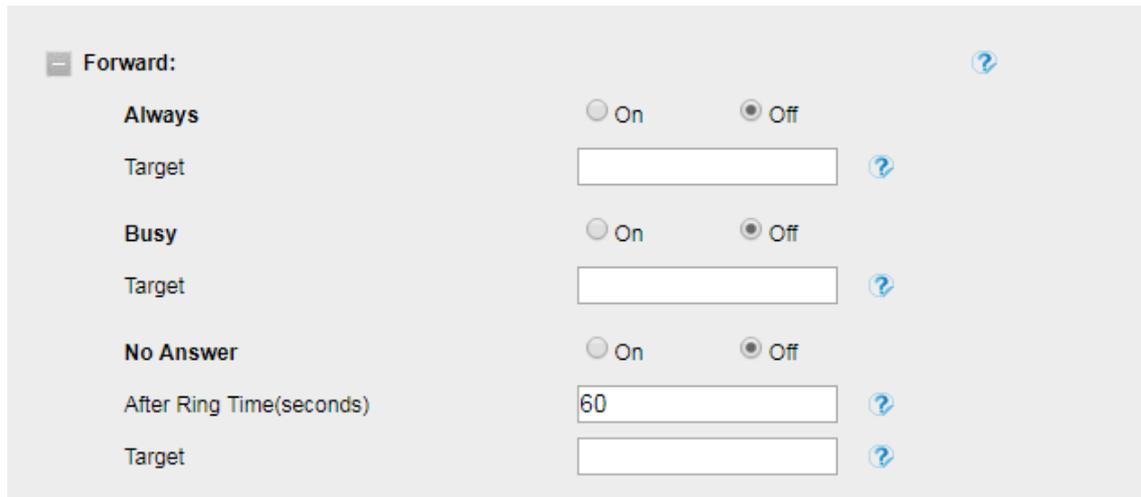


The screenshot shows a configuration menu titled "Forward:" with a collapse icon and a help icon. It contains three sections: "Always", "Busy", and "No Answer". Each section has an "On" radio button (unselected) and an "Off" radio button (selected). Below each section is a "Target" text input field with a help icon. The "No Answer" section also includes an "After Ring Time(seconds)" text input field with the value "60" and a help icon.

#### To cancel the forward feature via Phone interface

1. Press Menu → Features → Call Forward → Always/Busy/No Answer Forward
2. Press  and  or press Info/Switch soft key to select the disable choice
3. Press  or Save soft key to save the configuration.

#### To cancel the forward feature via Web interface

1. Setting → Features
2. Click Off for the Always/Busy/No Answer
3. Click  to save the configuration

#### To configure dynamic forward

#### Forward an incoming call during the ringing.

1. When the phone is ringing, press FWD soft key.



2. Enter the forward number or select the desired number from Directory soft key (Precondition: local directory has one or more contacts).
3. Press  or press the Send soft key, then the call is forwarded.

**Note:**

If the Programmable Key or line key is set as BLF, when an incoming call ringing, press this BLF key directly to realize the dynamic forward. You can choose a desired forward number from the Directory when you press the Forward key.

## Call Return

This feature allows you to dial the last phone call you received.

**To configure the Call Return via Phone interface**

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key2 (for example)
2. Press  and  or press Switch soft key to select the Call Return in the Type field.
3. Press  or Save soft key to save the configuration

**To configure the Call Return via Web interface**

1. Click Function keys → Line Key.
2. Select the desired Line Key and select Call Return in the Type.
3. Click the  button to save the configuration.


## Call Back


When this option is set, if the phone you call is busy and does not set call waiting or voice mail, your LCD screen will prompt for call-back, as shown in figure



If you press the callback, the phone will dial the Callback phone number.


### To configure the Call Back via Web interface

1. Click Setting → Features → Callback .
2. Fill the Callback phone number.
3. Click  to save the configuration.

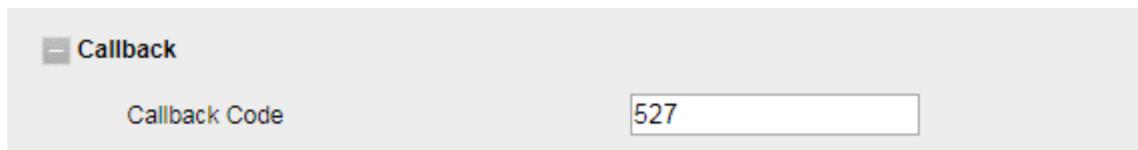

## Call Waiting Tone

1. Click Setting → Features
2. Select Call Waiting: On and Call Waiting Tone: On

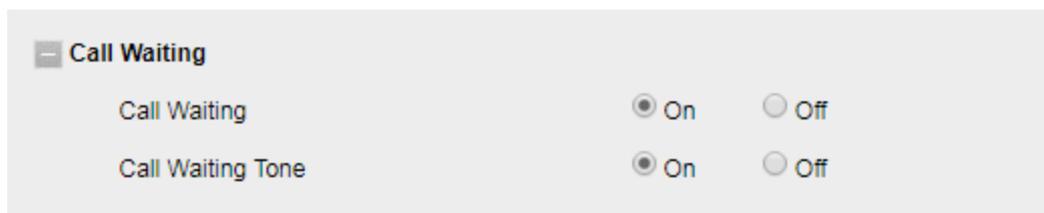

### To Change the Call Waiting Tone time via Web interface

1. Click Setting → Tones

The screenshot shows the Htek web interface with the 'Setting' menu selected. The 'Call Waiting Tone' field is highlighted with a red box. The configuration is as follows:

Select Country	Custom
Dial Tone	f1=350@-13,f2=440@-13,c=0/0;
Ringback Tone	f1=440@-19,f2=480@-19,c=2000/4000;
Busy Tone	f1=480@-24,f2=620@-24,c=500/500;
Reorder Tone	f1=480@-24,f2=620@-24,c=250/250;
Confirmation Tone	f1=350@-11,f2=440@-11,c=100/100-100/100-100/100;
Call Waiting Tone	f1=440@-13,c=300/10000-300/10000-0/0;

**NOTE**  
**Select Country:**  
 Select your country to generate the standard call tones. Or select Custom to customize the call tones.

2. Change the Tone Time as you want (for example 3s)

Call Waiting Tone: f1=440@-13 c=300/10000-300/10000-0/0;

## Hide Caller ID

Just enable the unknown/hidden caller feature, by enabling Anonymous call feature thereby the receiver won't be able to know who is calling them.

### To configure anonymous call

1. Press Menu → Features → Anonymous Call → Account ID 1
2. Press and or press Info/Switch soft key to select the enable choice in Anonymous Call filed.
3. Enter the Call On Code (optional), Call Off Code (optional).
4. Press or Save soft key to save the configuration.

### To cancel anonymous call feature

1. Press Menu → Features → Anonymous Call → Account ID 1
2. Press and or press Info/Switch soft key to select the disable choice in

Anonymous Call filed.

3. Press  or Save soft key to save the configuration.

## Reject Anonymous

If you do not want to be disturb by anonymous calls, you can set the reject anonymous call features, so you will not hear the unknown calls

### To configure rejecting anonymous call

1. Press Menu →Features →Anonymous Call →Account ID 1
2. Press  and  or press Info/Switch soft key to select the enable choice in Rejection filed.
3. Enter the Reject On Code (optional), Reject Off Code (optional).
4. Press  or Save soft key to save the configuration

### To cancel rejecting anonymous call

1. Press Menu →Features →Anonymous Call →Account ID 1
2. Press  and  or press Info/Switch soft key to select the disable choice in Rejection filed.
3. Press  or Save soft key to save the configuration.

## Call Mute

When you use the Mute feature, the other parties will not hear your voice while you can hear their voice. Call mute applies to all modes (handset, headset, and speakerphone).

### To mute the call during a call (including a conference call)

1. Press the Mute key , then the Mute key glows green, and the LCD display Mute Icon.

2. To disable the mute function, press  again.

## DND

When you use the DND feature, the phone is to reject all incoming calls automatically and you can see the DND icon shown on the Status Bar of the LCD on idle page.

### To enable DND feature via Phone interface

Press the DND soft key when the phone is idle, and then DND icon shown on the LCD.

### To disable DND feature via Phone interface


Press the DND soft key again, and then there is no DND icon on the LCD.


## Hot Line

### To configure Hot Line

1. Press Menu → Features → Hot Line
2. Enter the Number and Delay time (as present, we support off hook auto dial).
3. Press  or Save soft key to save the configuration

### To configure Hotline auto dial via Web interface

1. Setting → Features.
2. Fill the number in the Hotline Number and Hotline Time-out.
3. Click  to save the configuration.

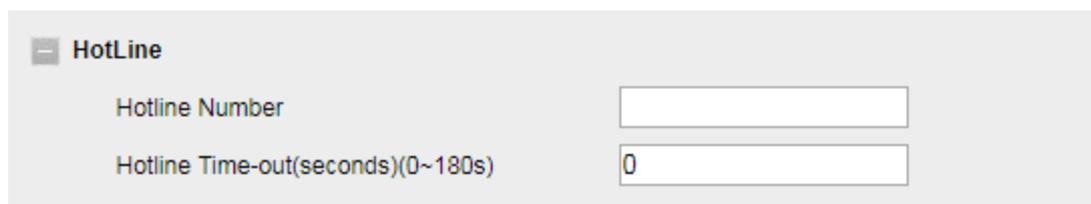

The screenshot shows a web interface for configuring the HotLine feature. It has a title bar with a minus sign and the text "HotLine". Below the title bar, there are two input fields. The first field is labeled "Hotline Number" and is empty. The second field is labeled "Hotline Time-out(seconds)(0~180s)" and contains the number "0".

Delete the hotline number and save the configuration, and then now the Hotline auto dial

is cancelled.


## Auto Redial


When this option is set, if the phone you call is busy and does not set call waiting or voice mail, your LCD screen will prompt for Auto Redial, as shown in figure.



If you press OK, your LCD will prompt Auto Redial Interval and Auto Redial Times

### To configure Auto Redial via Web interface

1. Click Setting → Features → Auto Redial
2. Select On or Off for Auto Redial.
3. Fill the number 1~300 seconds for the Auto Redial Interval.
4. Fill the number 1~300 times for the Auto Redial Times.
5. Click  to save the configuration.

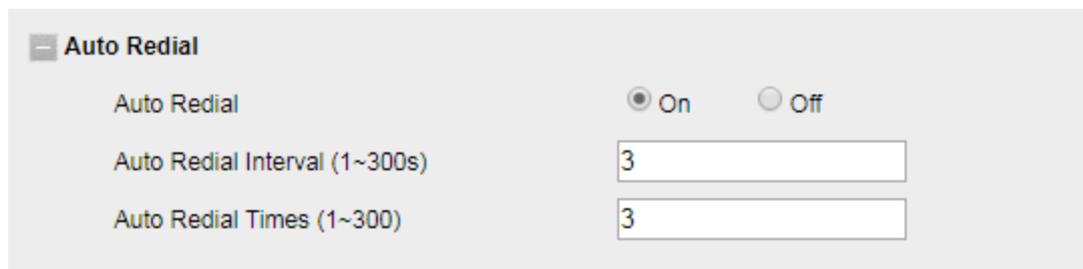A screenshot of a web interface configuration page for "Auto Redial". The page has a header "Auto Redial" with a minus sign icon. Below the header, there are three rows of configuration options. The first row is "Auto Redial" with radio buttons for "On" (selected) and "Off". The second row is "Auto Redial Interval (1~300s)" with a text input field containing the number "3". The third row is "Auto Redial Times (1~300)" with a text input field containing the number "3".


## Function Keys Features and Settings


### Line

It works same as Line keys.

### To configure Line Feature via Web interface

1. Click Function keys → Line Key.

2. Select the wanted Key and set as Line.
3. Select the Account.
4. Click the  button to save the configuration.

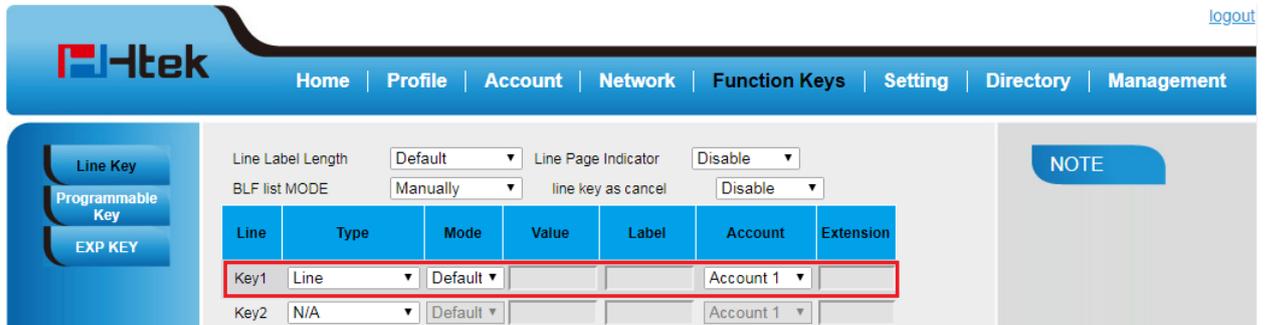

## Speed Dial

With this feature, you can dial one number by pressing the configured speed dial key.

### To configure Speed Dial feature via Phone interface


1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key2(for example)
2. Press  and  key to select the Speed Dial in the Type field.
3. Enter the targeted Number.
4. Press  or Save soft key to save the configuration


Then the selected Line Key will work as Speed Dial.

### To configure Speed Dial feature via Web interface

1. Click Function keys → Line Key.
2. Select the wanted Line Key and set as Speed Dial.
3. Enter the desired phone number in the Value field.

4. Select the Account

5. Click the  to save the configuration.

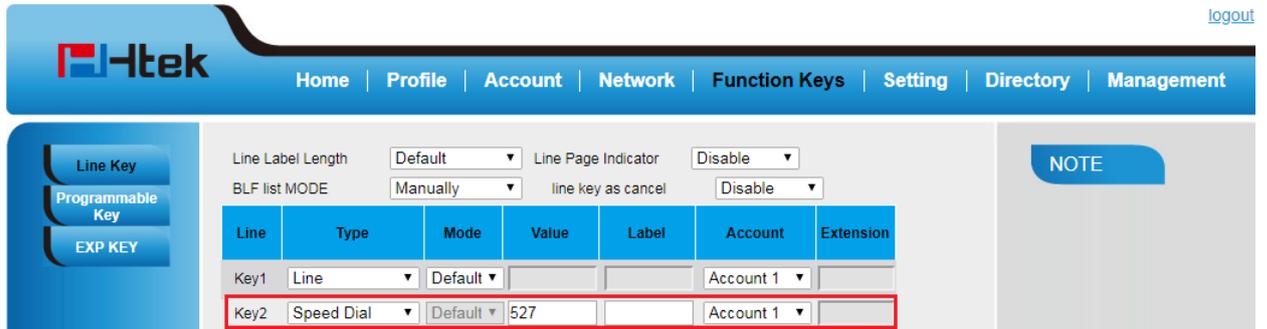

Line Label Length: Default | Line Page Indicator: Disable

BLF list MODE: Manually | line key as cancel: Disable

Line	Type	Mode	Value	Label	Account	Extension
Key1	Line	Default			Account 1	
Key2	Speed Dial	Default	527		Account 1	

## BLF

You can use the BLF (Busy Lamp Field) feature to monitor a specific extension number whether the extension is busy or free.


1. When the extension you are monitoring is idle, the light is steady green.
2. When the monitored extension is ringing, the light is blinking red, press the BLF key to pick the phone up directly.
3. When the monitored extension is calling or in a conversation, the light is steady red.


### To configure a BLF key by phone

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key2 (for example).
2. Select the targeted Line Key.
3. Press  and  or press Switch soft key to select the BLF in the Type field.
4. Enter the targeted Value Number.
5. Press  and  to select the Account ID.
6. Enter the Pickup Code.
7. Press  or Save soft key to save the configuration

### To configure a BLF key by web

1. Click Function keys → Line Key.
2. Select the desired Line Key and select BLF in the Type.

3. Enter the monitored phone number in the Value field.
4. Select the Account
5. Fill the Extension.
6. Click  to save the configuration.

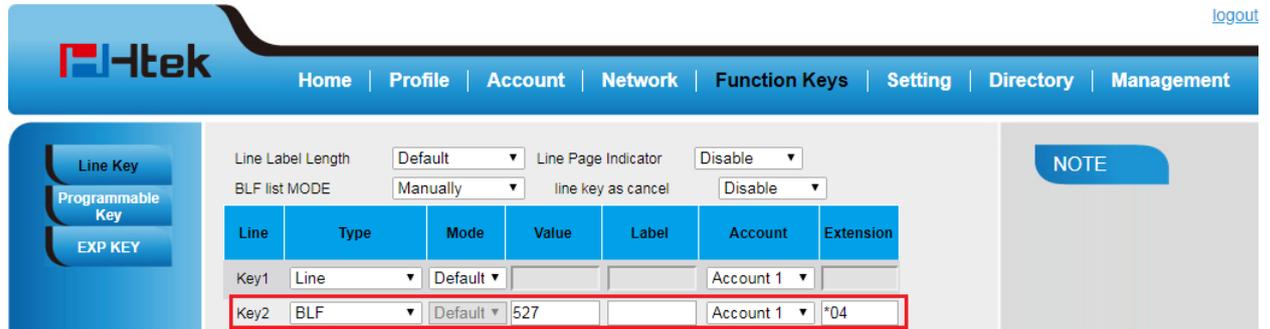

Line Key  
Programmable Key  
EXP KEY

Line Label Length: Default | Line Page Indicator: Disable  
BLF list MODE: Manually | line key as cancel: Disable

Line	Type	Mode	Value	Label	Account	Extension
Key1	Line	Default			Account 1	
Key2	BLF	Default	527		Account 1	*04

NOTE

**Note:**

This feature is not available on all servers. For more information, contact your system administrator.

After setting the BLF key, do not need to restart the phone.

## BLF List

To configure BLF List via Web interface :

1. Login and click Account→Basic
2. Fill the Eventlist BLF URL and click  to save the configuration.

[logout](#)

Home | Profile | Account | Network | Function Keys | Setting | Directory | Management

**Basic**

**Account** Account 1

Account Status Registered

\* Account Active  No  Yes

Profile Profile 1

Label  ?

\* SIP User ID 531 ?

\* Authenticate ID 531 ?

\* Authenticate Password ..... ?

Name  ?

Local SIP Port 5060 ?

Use Random Port  No  Yes

Voice Mail UserID  ?

Dial Plan {[x\*]+}

**Eventlist BLF URL**

Shared Line Disable

SCA Barge-In Disable ?

Direct Call Pickup Code \*04

Group Call Pickup Code

Feature Key Sync Disable

**NOTE**

The \* fields must be filled (requires a phone restart)

**Basic:**  
The Basic parameters configured by the administrator.

### 3. To configure BLF List Keys

3.1 Click→ Function Keys→ Line Key

3.2 Select the BLF List in the Type Field.

3.3. Select Account

3.4 Click SaveSet to save the configuration and then restart the Phone.

For more information, please check [BLF list Note](#) on [www.htek.com](http://www.htek.com) web.


## Voice Message


This phone supports Voicemail, and when there is a message, the message  will light green. Moreover, when you pick up the handset, or press Speaker key, you will hear some faster busy tone.

### To configure the Voice mail feature via Phone interface

1. Press Menu → Messages → Voice Mail → Set Voice Mail.
2. Enter the Account1/2.
3. Press  or Save soft key to save the configuration

### To configure Voice Mail Line Key via Web interface:

1. Click Function keys → Line Key.
2. Select the wanted Key.
3. Enter the desired voicemail feature codes in the Value field.
4. Fill the Label name to be displayed on LCD.
5. Select the Account.
6. Click  to save the configuration.

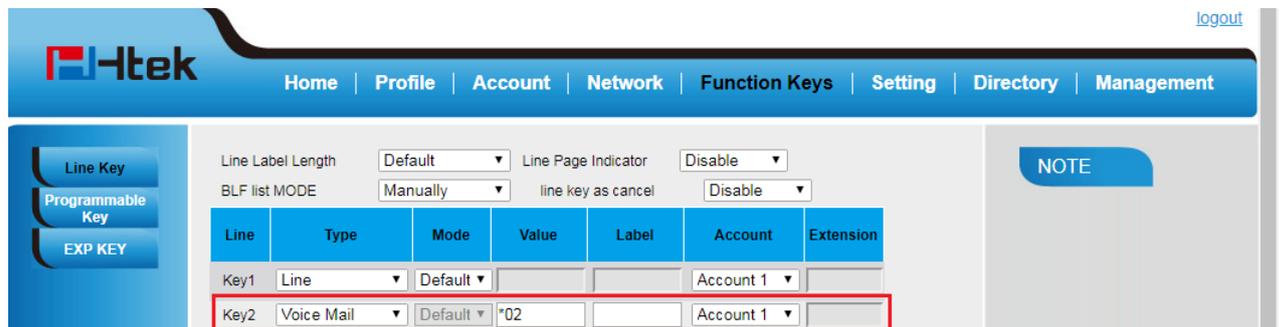

Line	Type	Mode	Value	Label	Account	Extension
Key1	Line	Default			Account 1	
Key2	Voice Mail	Default	*02		Account 1	

### To configure a Voice mail key by Phone interface:

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key2 (for example).
2. Select the targeted Line Key.
3. Press  and  key to select the Voice Mail in the Type field.
4. Enter the Value.
5. Press  and  key to select the Account ID.

6. Press  or Save soft key to save the configuration

#### To leave a voice mail:

You can leave a voice mail when the receiver is busy or its inconvenient for them to answer the call. Follow the voice prompt from the system server to leave a voice mail, and then hang up.

#### To listen to voice mails:

When the Phone interface prompts receiving new voice mail's icon, the power indicator LED flashes red(Setting->Preference: Enable Voice Message Status).

1. Pressing  or the targeted Line Key to dial out the voice mail access code.
2. Follow the voice prompt to listen to voice mail.

#### To view the voicemail via Phone interface

Press Menu->Messages->Voice Mail->View Voice Mail.

The LCD screen displays the amount of new and old voice mails



1.530:15 new, 0 old, 0 new ..  
2.Account2:Not Registered  
Back INFO

#### Note:

**This feature is not available on all servers. For more information, contact your system administrator.**

**Before listening to voice mails, make sure the voice mail access code has been configured.**

**When all new voice mails are retrieved, the power indicator LED will go out.**

## Direct Pickup

With this feature, you can pick up the set line when it ringing.

#### To configure Direct Pickup feature via Phone interface

1. Press Menu →Features →Function Keys →Line Keys as Function Keys → Line Key2(for example)
2. Press  and  key to select the PickUP in the Type field.

3. Enter the value.
4. Press and key to select the Account ID.
5. Press or Save soft key to save the configuration

Then the selected Line Key will work as Direct Pickup.

### To configure Direct Pickup feature via Web interface

1. Click Function keys → Line Key.
2. Select the wanted Line Key and set as Direct Pickup.
3. Enter the desired phone number in the Value field.
4. Select the Account
5. Click the button to save the configuration.

The screenshot shows the Htek web interface with the following elements:

- Header: Htek logo and navigation menu (Home, Profile, Account, Network, Function Keys, Setting, Directory, Management).
- Left sidebar: Line Key, Programmable Key, EXP KEY.
- Main content area:
  - Line Label Length: Default
  - Line Page Indicator: Disable
  - BLF list MODE: Manually
  - line key as cancel: Disable
  - Table with columns: Line, Type, Mode, Value, Label, Account, Extension.
- Right sidebar: NOTE.

Line	Type	Mode	Value	Label	Account	Extension
Key1	Line	Default			Account 1	
Key2	Direct Pickup	Default	527		Account 1	

## Group Pickup

With this feature, you can pick up the specified group that you want incoming calls.

### To configure the Group Pickup via Phone interface

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key2(for example)
2. Press and or press Switch soft key to select the Group in the Type field.
3. Enter the group pickup code or the direct pickup code followed the desired phone number in the Value field.

4. Press and key to select the Account ID.
5. Press or Save soft key to save the configuration

### To configure the Group Pick up via Web interface

1. Click Function keys → Line Key.
2. Select the desired Line Key and select Group Pickup in the Type.
3. Enter the group pickup code or the direct pickup code followed the desired phone number in the Value field.
4. Select the Account.
5. Click the to save the configuration.

The screenshot shows the Htek web interface with the 'Function Keys' menu selected. On the left, 'Line Key' is highlighted. The main area displays configuration options for Line Label Length (Default), Line Page Indicator (Disable), BLF list MODE (Manually), and line key as cancel (Disable). Below these is a table with columns: Line, Type, Mode, Value, Label, Account, and Extension. Key1 is set to 'Line' type. Key2 is highlighted with a red box and is set to 'Group Pickup' type, 'Default' mode, and '\*4' value, with 'Account 1' selected in the Account column.

Line	Type	Mode	Value	Label	Account	Extension
Key1	Line	Default			Account 1	
Key2	Group Pickup	Default	*4		Account 1	

This screenshot is identical to the previous one, but the 'Value' field for Key2 now contains '\*04527'.

Line	Type	Mode	Value	Label	Account	Extension
Key1	Line	Default			Account 1	
Key2	Group Pickup	Default	*04527		Account 1	

## Call Park

With this feature, you can put a call on hold and continue the conversation from another phone.

### To configure the Call Park via Phone interface

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key2 (for example)
2. Press and or press Switch soft key to select the Call Park type.
3. Select the Account ID.

4. Enter the call park code in the Value field
5. Press or Save soft key to save the configuration

### To configure the Call Park via Web interface

1. Click Function keys → Line Key.
2. Select the desired Line Key and select Call Park in the Type.
3. Enter the call park code in the Value field.
4. Select the Account.
5. Click the button to save the configuration.

Line Label Length: Default | Line Page Indicator: Disable  
BLF list MODE: Manually | line key as cancel: Disable

Line	Type	Mode	Value	Label	Account	Extension
Key1	Line	Default			Account 1	
Key2	Call Park	Default	SP10		Account 1	

For More information for Call Park, please see: [Call park note](#) on [www.htek.com/](http://www.htek.com/)

## Intercom


When use the intercom feature, you can quickly get access connect to the configured one.


### To configure intercom feature via Phone interface

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key2(for example)
2. Press and key to select the Intercom in the Type field.
3. Enter the intercom codes followed by desired number in the Value field.
4. Select the Account ID.
5. Press or Save soft key to save the configuration

Then the selected Line Key will work as intercom.


### To configure Intercom feature via Web interface

1. Click Function keys → Line Key.
2. Select the wanted Line Key.
3. Enter intercom codes followed by desired number in the Value field.
4. Select the Account.
5. Click the  button to save the configuration.

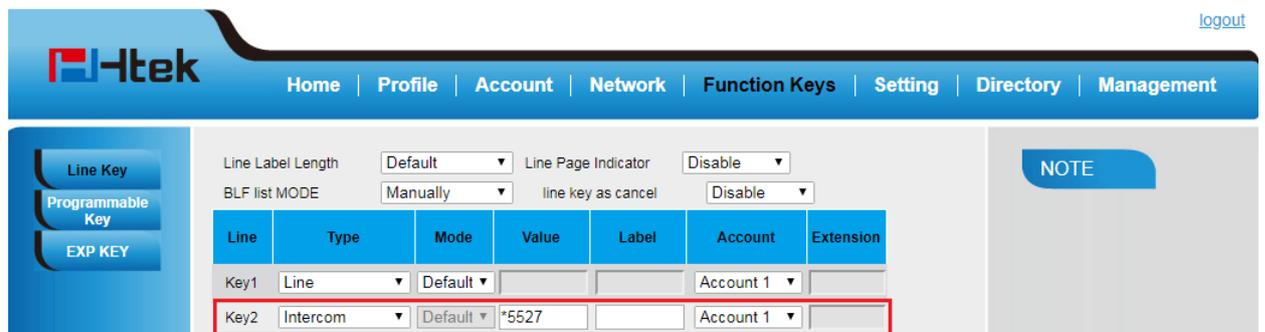

Line	Type	Mode	Value	Label	Account	Extension
Key1	Line	Default			Account 1	
Key2	Intercom	Default	*5527		Account 1	

If you want to achieve the intercom feature, you must enable the “Allow Auto Answer By Call-Info”

1. Click Profile
2. Select the desired profile from the pull-down list of Profile in the Profile field.
3. Click Advanced
4. Enable the “Allow Auto Answer By Call-Info”
5. Click the  button to save the configuration.




Auto Answer  No  Yes


**Allow Auto Answer By Call-Info  No  Yes**

Turn off Speaker on remote disconnect  No  Yes

## Intercom Barge

If this option is enabled, when there is an active call and an incoming intercom call arrives, the previous call will be put on hold and the intercom call will be answered

1. Click the Setting → Preference
2. Set On or Off for Intercom Barge.
3. Click  for the setting.



**Note:**


**This feature is not available on all servers. For more information, contact your system administrator.**


## DTMF

When the key is configured as DTMF key, you are allowed to send out the desired DTMF number during the conversation.

To use this feature, you should sure that the DTMF Tone is on.

**To configure the DTMF via Web interface**

1. Click Setting→ Preference
2. Select On for Keypad DTMF Tone.
3. Click the  button to save the configuration.



**To configure the DTMF via Phone interface**

1. Press Menu →Features →Function Keys →Line Keys as Function Keys → Line Key2(for example)
2. Press  and  key to select the DTMF in the Type field.
3. Enter the value with the Desired DTMF number

- Press or Save soft key to save the configuration

### To configure the DTMF via Web interface

- Click Function keys → Line Key.
- Select the desired Line Key and select DTMF in the Type.
- Fill the value with the Desired DTMF number.
- Click the button to save the configuration.

The screenshot shows the Htek web interface for configuring Line Keys. The navigation bar includes Home, Profile, Account, Network, Function Keys, Setting, Directory, and Management. The left sidebar has buttons for Line Key, Programmable Key, and EXP KEY. The main content area has several configuration options: Line Label Length (Default), Line Page Indicator (Disable), BLF list MODE (Manually), and line key as cancel (Disable). Below these is a table with columns: Line, Type, Mode, Value, Label, Account, and Extension. The table has two rows: Key1 and Key2. Key1 is set to Line, Default, and Account 1. Key2 is set to DTMF, Default, 827, and Account 1. A red box highlights the Key2 row. A NOTE box is visible on the right.

Line	Type	Mode	Value	Label	Account	Extension
Key1	Line	Default			Account 1	
Key2	DTMF	Default	827		Account 1	


## Prefix

If the key is configured as Prefix key, you can set the number prefix (e.g. Before the number plus 9), then you don't input 9, press the key and 9 will display on the LCD interface.


### To configure the Prefix via Phone interface

- Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key2(for example)
- Press and key to select the Prefix in the Type field.
- Enter the value with number that you want to set as prefix
- Press or Save soft key to save the configuration

### To configure the Prefix via Web interface

1. Click Function keys → Line Key.
2. Select the desired Line Key and select Prefix in the Type.
3. Fill the value.
4. Click the  button to save the configuration.

Then when you press this key, the set value is input directly.

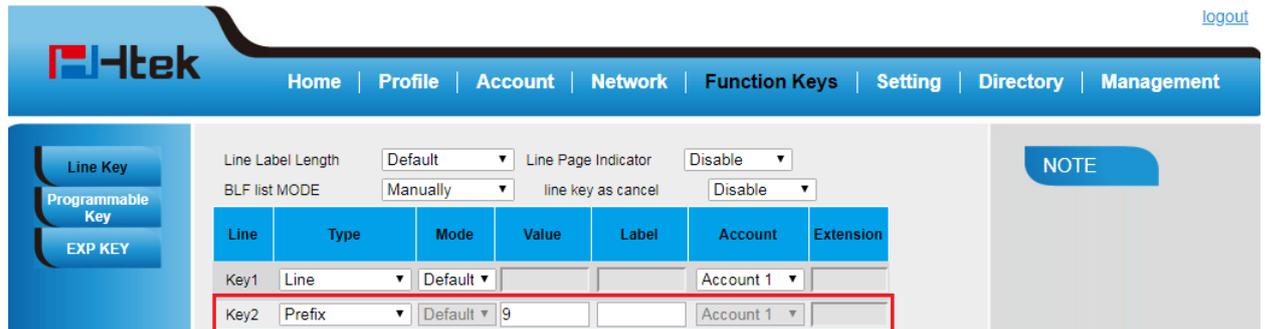

Line	Type	Mode	Value	Label	Account	Extension
Key1	Line	Default			Account 1	
Key2	Prefix	Default	9		Account 1	


## Local Group

When use the Local Group feature, press the key and enter the local Contacts interface quickly.

### To configure the Local group via Phone interface

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key2(for example)
2. Press  and  key to select the Local Group in the Type field.
3. Press  or Save soft key to save the configuration

### To configure the Local Group via Web interface

1. Click Function keys → Line Key.
2. Select the desired Key and select Local Group in the Type.
3. Click the  button to save the configuration.

Then you can press the Local Group key to access the pre-defined contact group in the local directory quickly.

## XML Group

When use the XML Group feature, press the key and enter the Remote Contacts interface quickly.

### To configure the XML group via Phone interface

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key2(for example)
2. Press and key to select the XML Group in the Type field.
3. Press and key to select the Account ID.
4. Press or Save soft key to save the configuration

### To configure the XML Group via Web interface

1. Click Function keys → Line Key.
2. Select the desired Key and select XML Group in the Type.
3. Click the button to save the configuration.

[logout](#)

Htek

[Home](#) | [Profile](#) | [Account](#) | [Network](#) | [Function Keys](#) | [Setting](#) | [Directory](#) | [Management](#)

Line Key

Programmable Key

EXP KEY

Line Label Length 
Line Page Indicator

BLF list MODE 
line key as cancel

Line	Type	Mode	Value	Label	Account	Extension
Key1	<input type="text" value="Line"/>	<input type="text" value="Default"/>			<input type="text" value="Account 1"/>	
Key2	<input type="text" value="XML Group"/>	<input type="text" value="Default"/>			<input type="text" value="Account 1"/>	

NOTE

## LDAP

When use the LDAP feature, you can get the LDAP Phonebook directly.

### To configure the LDAP via Phone interface

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key2(for example)
2. Press and key to select the LDAP in the Type field.
3. Press or Save soft key to save the configuration

### To configure the LDAP via Web interface

1. Click Function keys → Line Key.
2. Select the desired Key and select LDAP in the Type.
3. Click the button to save the configuration.

[logout](#)

Htek

[Home](#) | [Profile](#) | [Account](#) | [Network](#) | [Function Keys](#) | [Setting](#) | [Directory](#) | [Management](#)

Line Key

Programmable Key

EXP KEY

Line Label Length 
Line Page Indicator

BLF list MODE 
line key as cancel

Line	Type	Mode	Value	Label	Account	Extension
Key1	<input type="text" value="Line"/>	<input type="text" value="Default"/>			<input type="text" value="Auto"/>	
Key2	<input type="text" value="LDAP"/>	<input type="text" value="Default"/>			<input type="text" value="Account 1"/>	

NOTE


## Broadsoft Group

When using the BroadSoft Group feature, by just pressing the key you can enter the Broadsoft Contacts interface quickly.

**To configure the Broadsoft group via Phone interface**

1. Press Menu →Features →Function Keys →Line Keys as Function Keys → Line Key2(for example)
2. Press  and  key to select the Broadsoft Group in the Type field.
3. Press  or Save soft key to save the configuration

**To configure the Broadsoft group via Web interface**

1. Click Function keys → Line Key.
2. Select the desired Key and select Broadsoft Group in the Type.
3. Click the  button to save the configuration.

## Conference

The Htek IP Phone supports up to 5-way conference. You are allowed to configure the programmable key to be used as a conference key. This key works same as .

**To configure the Conference via Phone interface**

1. Press Menu →Features →Function Keys →Line Keys as Function Keys → Line Key2(for example)
2. Press  and  key to select the Conference in the Type field.
3. Press  or Save soft key to save the configuration

**To configure Conference via Web interface**

1. Click Function keys →Line Key.
2. Select the desired Key and select Conference in the Type.

3. Click the  button to save the configuration.

## Forward

If the key is configured as Forward key, press this key under the idle status, the IP phone will turn to the Always Forward interface and you can set the Forward to number, then when there is any call to the number will be forwarded to the set number automatically.

### To configure the Forward via Phone interface

1. Press Menu →Features →Function Keys →Line Keys as Function Keys → Line Key2(for example)
2. Press  and  key to select the Forward in the Type field.
3. Enter the Number to forward to.
4. Press  or Save soft key to save the configuration

### To configure Forward via Web interface

1. Click Function keys →Line Key.
2. Select the desired Key and select Forward in the Type.
3. Enter the Value with the number you want to forward to.
4. Click the  button to save the configuration.

## Transfer

You are able to configure the key as a transfer key to perform the Blind/Attended/Semi-Attended Transfer.


### To configure the Transfer via Phone interface

1. Press Menu →Features →Function Keys →Line Keys as Function Keys → Line

Key2(for example)

2. Press  and  key to select the Transfer in the Type field.
3. Enter the Number to transfer to
4. Press  or Save soft key to save the configuration

#### To configure Transfer via Web interface

1. Click Function keys →Line Key.
2. Select the desired Key and select Transfer in the Type.
3. Enter the Value with the number that wanted transfer to
4. Click the  button to save the configuration.

## Hold

The key can be configured as a hold key. You can use this key to hold and resume a call during the conversation.

#### To configure the Hold via Phone interface

1. Press Menu →Features →Function Keys →Line Keys as Function Keys → Line Key2(for example)
2. Press  and  key to select the Hold in the Type field.
3. Press  or Save soft key to save the configuration

#### To configure Hold via Web interface

1. Click Function keys →Line Key.
2. Select the desired Key and select Hold in the Type.

3. Click the  button to save the configuration.

## Group Listening

With this feature, when you have an active call, you can listen using Handset and Free-speaker, but only can use the handset to speak.

### To configure the Group listening via Phone interface

1. Press Menu →Features →Function Keys →Line Keys as Function Keys → Line Key2(for example)
2. Press  and  key to select the Group Listening in the Type field.
3. Press  or Save soft key to save the configuration

### To configure Group listening via Web interface

1. Click Function keys →Line Key.
2. Select the desired Key and select Group Listening in the Type.
3. Click the  button to save the configuration.

## DND


If the key is configured as DND key, allows you to activate the DND function immediately when you press it and the phone will reject all incoming calls automatically. Press it again to deactivate DND mode.

### To configure the DND via Phone interface

1. Press Menu →Features →Function Keys →Line Keys as Function Keys → Line Key2(for example)
2. Press  and  key to select the DND in the Type field.

3. Press  or Save soft key to save the configuration

#### To configure DND via Web interface

1. Click Function keys →Line Key.
2. Select the desired Key and select DND in the Type.
3. Click the  button to save the configuration.

#### To enable DND feature

Press the DND soft key when the phone is idle status, and then DND icon shown on the LCD.


#### To disable DND feature

Press the DND soft key again, and then there is no DND icon on the LCD.

## Redial

If the key is configured as Redial key, you can redial the last placed call from the IP Phone.

#### To configure Redial via Web interface


1. Click Function keys →Line Key
2. Select the desired Key and select Redial in the Type.
3. Enter the Label displayed on LCD.
4. Click the  button to save the configuration.

## SMS

### Send SMS

#### To send SMS via web Interface

1. Click Setting→ SMS
2. Select the Account(from which account the SMS sent)
3. Enter the target number
4. Input the content of SMS, and click Send.

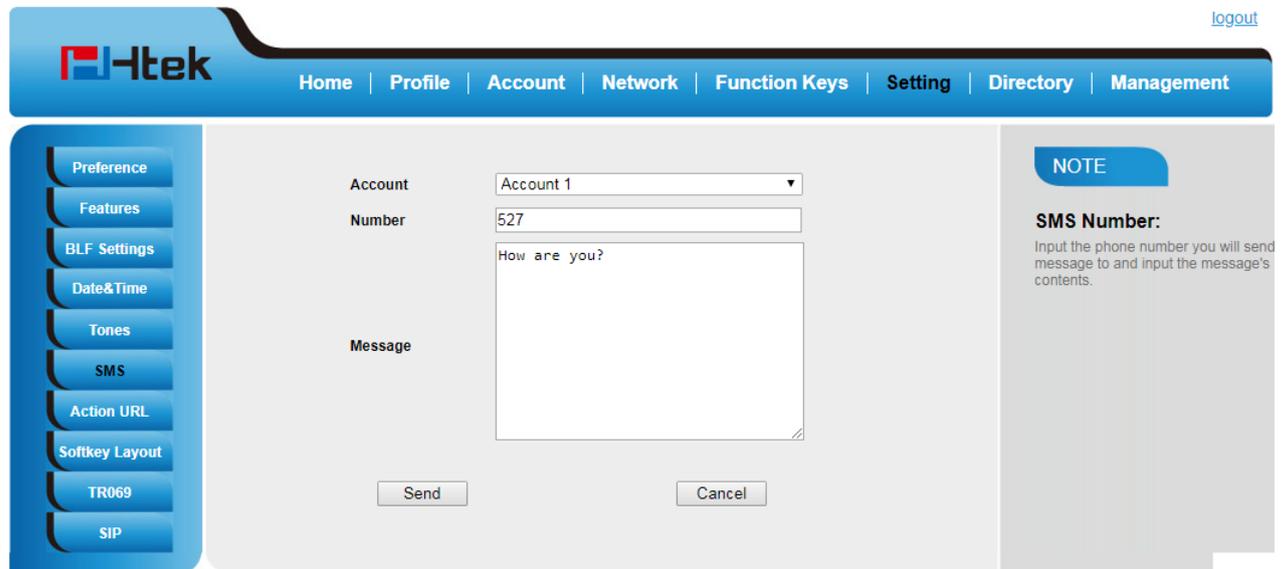

#### To send SMS via Phone interface :

1. Click Menu→ Messages→ Text Message→ Set SMS
2. Enter the contents in the blank field.
3. Press the Send button
4. Select the account in the From field (from which account the SMS sent)
5. Enter the target number in the To field (to which account the number sent)
6. Press the Send button.

## Set SMS Line Key

#### To configure the SMS via Phone interface

1. Press Menu →Features →Function Keys →Line Keys as Function Keys → Line Key2(for example)
2. Press  and  key to select the SMS in the Type field.

3. Press or Save soft key to save the configuration

### To configure SMS via Web interface

1. Click Function keys →Line Key.
2. Select the desired Key and select SMS in the Type.
3. Click the button to save the configuration.

## Record

With record feature, you can record your calls by pressing the record key .

### To configure the record via Phone interface

1. Press Menu →Features →Function Keys →Line Keys as Function Keys → Line Key2(for example)
2. Press and or press Switch soft key to select the Record in the Type field.
3. Press or Save soft key to save the configuration

### To configure the record via Web interface

1. Click Function keys → Line Key.
2. Select the desired Line Key and select Record in the Type.
3. Click the button to save the configuration.

The screenshot shows the Htek web interface with a navigation bar at the top containing 'Home', 'Profile', 'Account', 'Network', 'Function Keys', 'Setting', 'Directory', and 'Management'. A 'logout' link is in the top right. On the left, there are buttons for 'Line Key', 'Programmable Key', and 'EXP KEY'. The main content area has several configuration options: 'Line Label Length' (Default), 'Line Page Indicator' (Disable), 'BLF list MODE' (Manually), and 'line key as cancel' (Disable). Below these is a table with columns: Line, Type, Mode, Value, Label, Account, and Extension. The table has two rows: 'Key1' with 'Line' type and 'Key2' with 'Record' type. The 'Key2' row is highlighted with a red border. A 'NOTE' box is on the right.

Line	Type	Mode	Value	Label	Account	Extension
Key1	Line	Default			Account 1	
Key2	Record	Default			Account 1	

**Note:**

Please contact the system administrator whether support this feature or not.


## URL Record

The phone sends HTTP URL request to trigger a recording. Contact your system administrator for the predefined URL.

### To configure the URL record via Phone interface

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key2(for example)
2. Press  and  key to select the URL Record in the Type field.
3. Fill the Value.
4. Press  or Save soft key to save the configuration

### To configure the URL record via Web interface

1. Click Function keys → Line Key.
2. Select the desired Line Key and select URL Record in the Type.
3. Fill the Value.
4. Click the  button to save the configuration.

## Paging

With this feature, you can call a paging group directly.

### To configure the paging via Phone interface

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key2(for example)
2. Press  and  or press Switch soft key to select the Paging in the Type field.
3. Enter the paging code followed the number.
4. Press  and  key to select the Account ID.

5. Press  or Save soft key to save the configuration

### To configure the Paging via Web interface

1. Click Function keys → Line Key.
2. Select the desired Line Key and select Paging in the Type.
3. Enter the paging code followed the number.
4. Select the Account.
5. Click the  button to save the configuration.

## Shared line

Htek IP Phone supports “Share Call Appearance” by Broadsoft and XCast standard. This feature allows members of the SCA group to share SIP lines and provides status monitoring (idle, active, progressing, hold) of the share line. When there is an incoming call designated for the SCA group, all of the members of the group will be notified of an incoming call and will be able to answer the call from the phone with the SCA extension registered in the group.

All the users that belong to the same SCA group will be notified by visual indicator when a user seizes the line and places an outgoing call, and all the users of this group will not be able to seize the line until the line goes back to an idle state or when the call is placed on hold (with the exception of when multiple call appearances are enabled on the server side).

In the middle of the conversation, there are two types of hold: Public Hold and Private Hold. When a member of the group places the call on public hold, the other users of the SCA group will be notified of this by the red-flashing button and they will be able to resume the call from their phone by pressing the line button. However, if this call is placed on private-hold, no other member of the SCA group will be able to resume that call.

To enable share call appearance, the user would need to register the share line account on the phone. In addition, they would need to navigate to “Account” ->“Advanced” on the webpage and set the line to “Share Line” and “SIP Server Type”, and configure the line key or Line Key as “line” type with the desired account on webpage or LCD. If the user requires more share call appearances, the user can configure multiple line keys (Function keys->Line key) to be “line” type associated with the account.

This feature is very useful in the boss and secretary scenario. For example, the secretary can share the boss' extension number on her phone. When there is an incoming call to the extension number of the boss, both the phones of the boss and the secretary will ring simultaneously. Either the boss or the secretary can answer the call. Calls on share line can be placed on hold or barged in.

#### To configure the line key as line via Phone interface

1. Press Menu → Features → Function Keys → Line Keys as Function Keys → Line Key2(for example)
2. Press  and  key to select the Line in the Type field.
3. Press  and  or press  key to select the Account ID.
4. Enter the Label
5. Enter the Value
6. Press  or Save soft key to save the configuration

#### To configure the line key as line via Web interface

1. Click Function keys → Line Key.
2. Select the desired Line Key and select Line in the Type.
3. Enter the Value.
4. Enter the Label.
5. Select the Account
6. Click the  button to save the configuration and then restart.

**Note:**

**This feature is not available on all servers. For more information, contact your system administrator.**


## Public Hold


The key can be configured as a public hold key. During a conversation, all members belonging to that particular SLA group can use this key to hold or resume a call.

### To configure the Public hold via Phone interface

1. Press Menu →Features →Function Keys →Line Keys as Function Keys → Line Key2(for example)
2. Press  and  key to select the Public Hold in the Type field.
3. Press  or Save soft key to save the configuration

### To configure public hold via Web interface

1. Click Function keys →Line Key.
2. Select the desired Key and select Public Hold in the Type.
3. Click the  button to save the configuration.

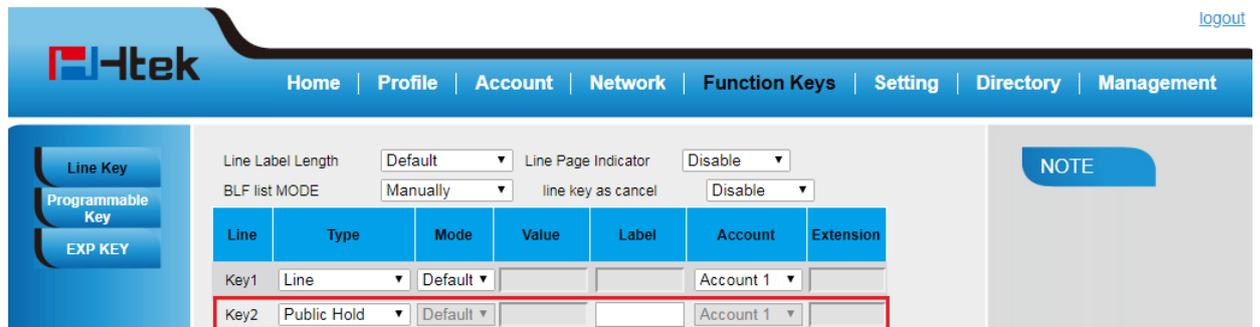

The screenshot shows the Htek web interface for configuring function keys. The top navigation bar includes Home, Profile, Account, Network, Function Keys, Setting, Directory, and Management. A sidebar on the left has buttons for Line Key, Programmable Key, and EXP KEY. The main content area shows configuration options for Line Label Length (Default), Line Page Indicator (Disable), BLF list MODE (Manually), and line key as cancel (Disable). Below these are two tables. The first table has columns Line, Type, Mode, Value, Label, Account, and Extension. The second table has columns Line, Type, Mode, Value, Label, Account, and Extension. The second row of the second table is highlighted with a red border and shows Key2, Public Hold, Default, and Account 1.

Line	Type	Mode	Value	Label	Account	Extension
Key1	Line	Default			Account 1	
Key2	Public Hold	Default			Account 1	

## Private Hold

The key can be configured as a private hold key. During a conversation, all members belonging to that particular SLA group can use this key to hold the call, but only the initiator can resume the call.


### To configure the Private hold via Phone interface

1. Press Menu →Features →Function Keys →Line Keys as Function Keys → Line Key2(for example)

2. Press and key to select the Private Hold in the Type field.
3. Press or Save soft key to save the configuration

**To configure private hold via Web interface**

1. Click Function keys →Line Key.
2. Select the desired Key and select Private Hold in the Type.
3. Click the button to save the configuration.

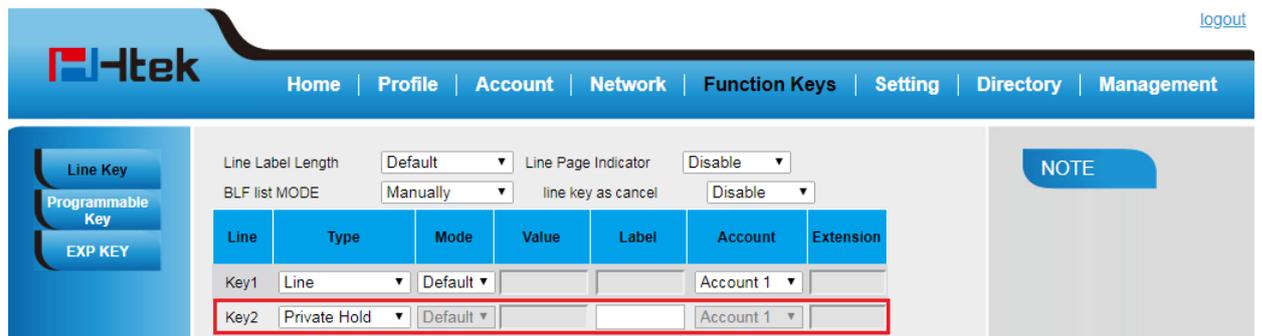

## Hot Desking

Hot Desking originates from the definition of being the temporary physical occupant of a work station or surface by a particular employee. A primary motivation for Hot Desking is cost reduction. This feature is regularly used in places where all employees are not in the office at the same time, or not in the office for a very long time, which means their personal offices are often vacant, consuming valuable space and resources.

You can use Hot Desking on the IP phone to logout the existing accounts and then log in a new account, which allows many users to share the phone resource in different times. To use this feature, first you need to configure a Hot Desking key in the advance settings.


This feature is supported on the version 1.0.3.82 or later

**To configure the hot desking via Phone interface**

1. Press Menu →Features →Function Keys →Line Keys as Function Keys → Line Key2(for example)
2. Press and or press key to select the Hot Desking in the Type field.
3. Enter the display name in the Label field.

4. Press  or Save soft key to save the configuration

**To configure the hot desking via Web interface :**

1. Click Function keys →Line Key.
2. Select the desired Key and select Hot Desking in the Type.
3. Select the desired account from the pull-down list of Account field.
4. Click the  button to save the configuration.

**To use the Hot desking feature on the user interface :**

1. Press the Hot Desking key when the IP Phone is idle.
2. Enter the Extension number and password

```
1.User Name:532
2.Password:*****
Cancel abc Delete Save
```

3. Click Save soft key  
You can see the account information which has changed.

**Note:**

**This feature is not available on all servers. For more information, contact your system administrator.**

## ACD

ACD feature is often used in offices for customer service, such as call center. The ACD system handles large volumes of incoming calls from callers who have no need to talk to a specific person but who require assistance from any of the different personnel at the earliest point. The ACD feature on the Htek IP Phone allows the ACD system to distribute calls from large volumes of incoming calls to the registered IP phone users. To use this feature, first you should configure an ACD key in the advance settings.


**To configure the ACD via Phone interface**

1. Press Menu →Features →Function Keys →Line Keys as Function Keys → Line

Key2(for example)

2. Press  and  or press  key to select the ACD in the Type field.
3. Enter the label in the Label field.
4. Select the desired account in the Account ID field.
5. Press  or Save soft key to save the configuration

#### To configure the ACD via Web interface:

1. Click Function keys →Line Key.
2. Select the desired Key and select ACD in the Type.
3. Enter the label in the Label field.
4. Select the desired account from the pull-down list of Account field.
5. Click the  button to save the configuration.

#### Note:

**This feature is not available on all servers. For more information, contact your system administrator.**


## Zero Touch

You can use this key feature to configure auto provision and network parameters quickly. This feature is supported on the version 1.0.3.82 or later

#### To configure the zero touch via Phone interface

1. Press Menu →Features →Function Keys →Line Keys as Function Keys → Line Key2(for example)
2. Press  and  or press  key to select the Zero Touch in the Type field
3. Press  or Save soft key to save the configuration

**To configure the zero touch via Web interface :**

1. Click Function keys →Line Key.
2. Select the desired Key and select Zero Touch in the Type.
3. Click the  button to save the configuration.

**To use the zero touch feature on the user interface :**

1. Press the Zero Touch key when the IP Phone is idle.
2. Press the OK soft key and the IP Phone will enter the WAN Port interface; you can change the WAN Type by pressing the Navigation keys.
3. Press the Next soft key to enter Network interface, then you can configure some information.
4. Press the Next soft key again, you can configure auto provision information.
5. When you finish the setting, you can press the OK to accept the changes.

**Note:**

**This feature is not available on all servers. For more information, contact your system administrator.**

## Multicast Paging


You can use multicast paging to quickly and easily forward out time sensitive announcements to people within the multicast group. You can configure a multicast paging key or a paging list key on the phone, which allows you to send a Real Time Transport Protocol (RTP) stream to the pre-configured multicast address(es) without involving SIP signaling. You can configure the phone to receive an RTP stream from pre-configured multicast listening address(es) without involving SIP signaling. You can specify up to 10 multicast listening addresses.

## Sending RTP Stream

**To configure a multicast paging key via Phone interface**

1. Press Menu →Features →Line Key →Line Key2 ( e.g. )
2. Press  and  or Switch key to select the Multicast Paging in the Type field.
3. Enter the multicast IP address and port number (e.g., 224.5.6.20:2000) in the Value field.  
The valid multicast IP addresses range from 224.0.0.0 to 239.255.255.255.
4. Press  or Save soft key to save the configuration

### To configure a multicast paging key via Web interface

1. Function keys->line key:
2. Select the desired Key and select Multicast Paging in the Type.
3. Enter the multicast IP address and port number (e.g., 224.5.6.20:2000) in the Value field.  
The valid multicast IP addresses range from 224.0.0.0 to 239.255.255.255.
4. Click the  button to save the configuration.

### Sending RTP Stream:

Press the multicast paging key when the phone is idle.

The phone sends RTP to a preconfigured multicast address (IP: Port). Any phone in the local network then listens to the RTP on the preconfigured multicast address (IP:Port). For both sending and receiving of the multicast RTP, there is no SIP signaling involved.

The multicast paging key LED illuminates solid green.

## Receiving RTP Stream

You can configure the phone to receive a Real Time Transport Protocol (RTP) stream from the pre-configured multicast address(es) without involving SIP signaling. You can specify up to 10 multicast addresses that the phone listens to on the network.

How the phone handles incoming multicast paging calls depends on Paging Barge and Paging Priority Active parameters configured via web user interface.

### Paging Barge

The paging barge parameter defines the priority of the voice call in progress. If the priority of an incoming multicast paging call is lower than that of the active call, it will be ignored automatically. If Disabled is selected from the pull-down list of Paging Barge, the voice call in progress will take precedence over all incoming multicast paging calls.

Valid values in the Paging Barge field:

- 1 to 10: Define the priority of the active call, 1 with the highest priority, 10 with the lowest.
- Disabled: The voice call in progress will take precedence over all incoming paging calls.

**Paging Priority Active**

The paging priority active parameter decides how the phone handles incoming multicast paging calls when there is already a multicast paging call on the phone. If enabled, the phone will ignore incoming multicast paging calls with lower priorities, otherwise, the phone will answer incoming multicast paging calls automatically and place the previous multicast paging call on hold. If disabled, the phone will automatically ignore all incoming multicast paging calls.


**Multicast Codec:**

You can only configure the codec by Web interface.

**To configure multicast codec key via Web interface**

1. Click Directory ->Multicast Paging:
2. Select the desired codec from the pull-down list of Multicast Codec
3. Click the  button to save the configuration.

**To configure multicast listening addresses via Web interface:**

1. Click Directory->Multicast Paging.
2. Select the desired value from the pull-down list of Paging Barge.
3. Select the desired value from the pull-down list of Paging Priority Active.
4. Enter the multicast IP address(es) and port number (e.g., 224.5.6.20:2000) which the phone listens to for incoming RTP multicast in the Listening Address field.
5. Enter the label in the Label field.
6. Click  button to save the configuration.

Htek

[Home](#) | [Profile](#) | [Account](#) | [Network](#) | [Function Keys](#) | [Setting](#) | [Directory](#) | [Management](#)

[Directory](#)  
[Remote Phone Book](#)  
[Call History](#)  
[LDAP](#)  
[Network Directory](#)  
[MultiCast Paging](#)

Paging Barge

Paging Priority Active

Multicast Codec

Index	Listening Address	Label	Multi Priority
IP Address 1	<input type="text" value="224.5.6.20:2000"/>	<input type="text" value="test1"/>	1
IP Address 2	<input type="text"/>	<input type="text"/>	2
IP Address 3	<input type="text"/>	<input type="text"/>	3
IP Address 4	<input type="text"/>	<input type="text"/>	4
IP Address 5	<input type="text"/>	<input type="text"/>	5
IP Address 6	<input type="text"/>	<input type="text"/>	6
IP Address 7	<input type="text"/>	<input type="text"/>	7
IP Address 8	<input type="text"/>	<input type="text"/>	8
IP Address 9	<input type="text"/>	<input type="text"/>	9
IP Address 10	<input type="text"/>	<input type="text"/>	10

NOTE

**Note:**

The priorities of listening to multicasting addresses can be predefined: 1 being the highest priority, 10 with the lowest in priority order. Both the multicast paging sender and receiver's phones play a warning tone when establishing a multicast paging call. Listening to Multicasting addresses can be configurable via Web interface only.


## Upgrade


### Factory Reset

**To set Factory Reset by Phone interface**

1. Press Menu → Settings → Advanced Setting( default password: admin) → Phone Setting → Factory Reset
2. Press OK soft key in the warning page.

**To set Factory Reset via Web interface**

1. Click Management → Upgrade
2. Click  and then confirm the setting.

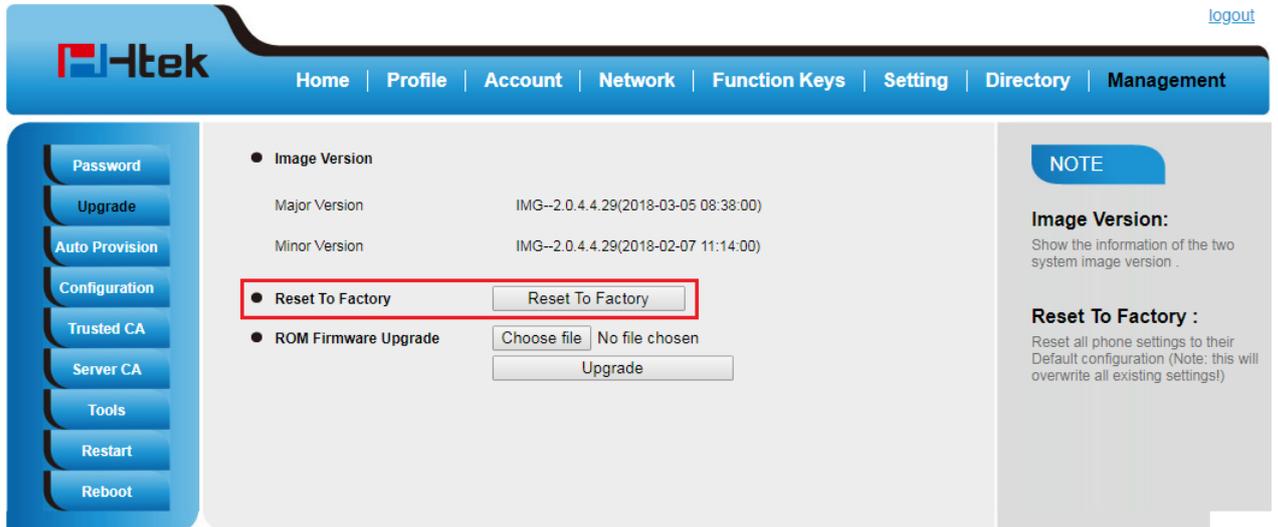


The screenshot shows the Htek web interface. The top navigation bar includes Home, Profile, Account, Network, Function Keys, Setting, Directory, and Management. A sidebar on the left contains buttons for Password, Upgrade, Auto Provision, Configuration, Trusted CA, Server CA, Tools, Restart, and Reboot. The main content area displays the 'Image Version' section with Major and Minor versions. Below this, the 'Reset To Factory' option is highlighted with a red box, and a 'Reset To Factory' button is visible. The 'ROM Firmware Upgrade' section includes a 'Choose file' button and an 'Upgrade' button. A 'NOTE' box on the right explains the 'Image Version' and 'Reset To Factory' actions.

## Pcap Feature

To use pcap via Web interface :


1. Click Management → Tools
2. Click Start and then operation the phone
3. When finish the operation, click Stop and then click Export.
4. Then you'll get the Pcap captures.

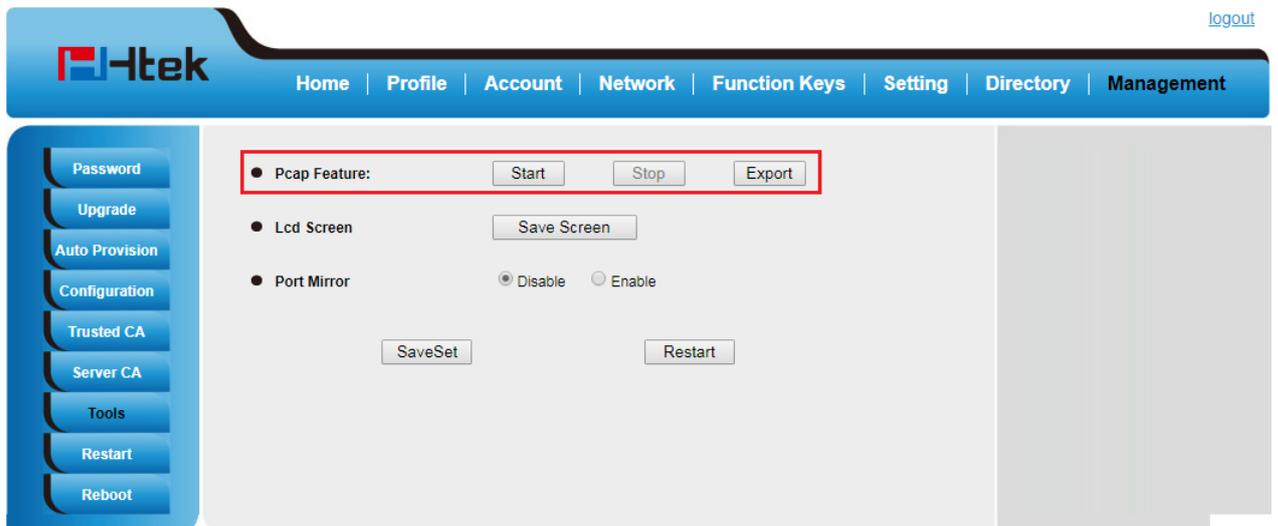


The screenshot shows the Htek web interface with the 'Pcap Feature' section highlighted in a red box. The top navigation bar and sidebar are the same as in the previous screenshot. The main content area displays the 'Pcap Feature' section with 'Start', 'Stop', and 'Export' buttons. Below this, the 'Lcd Screen' section has a 'Save Screen' button, and the 'Port Mirror' section has radio buttons for 'Disable' and 'Enable', along with 'SaveSet' and 'Restart' buttons.


## System Log

To download system log via Web interface :

1. Click Management→ Configuration
2. Click  of the system Log

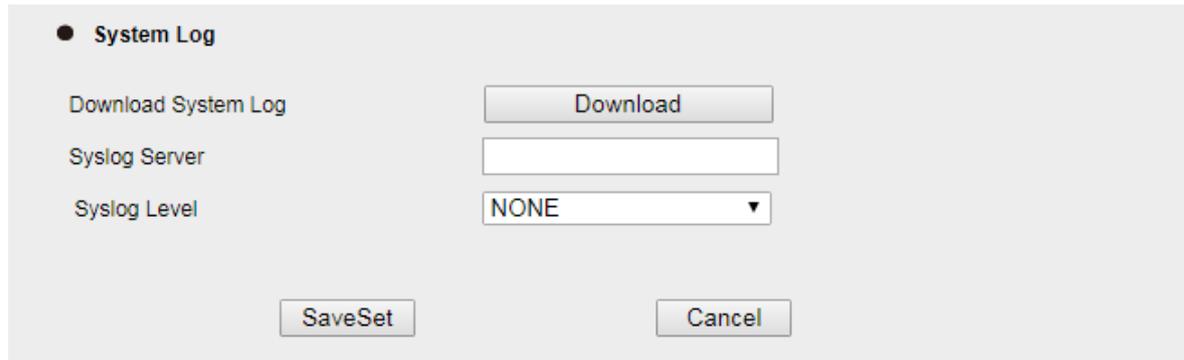

3. Then you'll get a txt file: syslog.tgz.



## Upgrade

To upgrade via HTTP, the “Management”->“auto provision” ->” Firmware Upgrade”->”Upgrade Mode” field needs to be set to HTTP, respectively. “Firmware Server Path” needs to be set to a valid URL of a HTTP server, server name can be in either FQDN or IP address format. Here are examples of some valid URL.

e.g. firmware.mycompany.com:5688/Htek

e.g. www.mycompany.com:5688/fm/Htek

e.g. 218.2.83.110

### Instructions for firmware upgrade via HTTP:


- (1) End users can choose to download the free HTTP server from <http://httpd.apache.org/> or use

Microsoft IIS web server. Then setup HTTP server.

- (2) Unzip the firmware file and put all of them under the *root/fm* directory of the HTTP server.

- (3) Visiting “<http://192.168.0.254/fm/fw902.rom> on localhost by browser” to verify the HTTP Server. If visiting “<http://192.168.0.254/fm/fw902.rom> on another computer and it not prompted to download fw902.rom file on this computer, please check if the firewall is on or off (Suggest you turn off the firewall).

**To configure the server path via Web interface:**

1. Click Management→ Auto provision:
2. Select the upgrade mode in the Upgrade Mode field
3. Enter the Firmware Server Path and Config Server Path (192.168.0.254 is HTTP server).
4. Enter the HTTP server's username and password (optional).
5. Click the  button to save the configuration.
6. Restart the UC902, IP Phone will restart and auto-get firmware files from HTTP server.

**NOTES:**


- Htek recommends end-user use the Htek HTTP server. For large companies, we recommend to maintain their own TFTP/HTTP/FTP/HTTPS server for upgrade and provisioning procedures.
- Once a “Firmware Server Path” is set, user needs to update the settings and restart the IP Phone. If the configured firmware server is found and a new code image is available, the UC902 will attempt to retrieve the new image files by downloading them into the UC902’s SDRAM. During this stage, the UC902’s LEDs will blink fastly until the checking/downloading process is completed. Upon verification of checksum, the new code image will then be saved into the Flash. If TFTP/HTTP/FTP/HTTPS fails for any reason (e.g. TFTP/HTTP/FTP/HTTPS server is not responding, there are no code image files available for upgrade, or checksum test fails, etc), the UC902 will stop the TFTP/HTTP/FTP/HTTPS

- process and simply boot using the existing code image in the flash.
- Firmware upgrade may take as long as 3 to 8 minutes over Internet, or just 1 minutes if it is performed on a LAN. It is recommended to conduct firmware upgrade in a controlled LAN environment if possible. For users who do not have a local firmware upgrade server.
  - Htek's latest firmware is available at [www.htek.com](http://www.htek.com) → Support → Document & Firmware.
  - Oversea users are strongly recommended to download the binary files and upgrade firmware locally in a controlled LAN environment.

### To upgrade manually via the Web configuration interface

1. Click Management → Upgrade
2. Click Choose file or the blank.



3. Select the firmware (fw902.rom )and then click




The screenshot shows the Htek web configuration interface. The navigation menu includes: Password, Upgrade, Auto Provision, Configuration, Trusted CA, Server CA, Tools, Restart, and Reboot. The main content area is divided into sections: 'Image Version' (Major Version: IMG--2.0.4.4.29(2018-03-05 08:38:00), Minor Version: IMG--2.0.4.4.29(2018-02-07 11:14:00)), 'Reset To Factory' (with a 'Reset To Factory' button), and 'ROM Firmware Upgrade' (with 'Choose file', 'No file chosen', and 'Upgrade' buttons). A 'NOTE' section on the right contains information about 'Image Version' and 'Reset To Factory'.

## Configuration File

### To download configuration file:

1. Click Management → Configuration →Configure File
2. Click the  or , then you can get a file: cfg.bin or cfg.xml

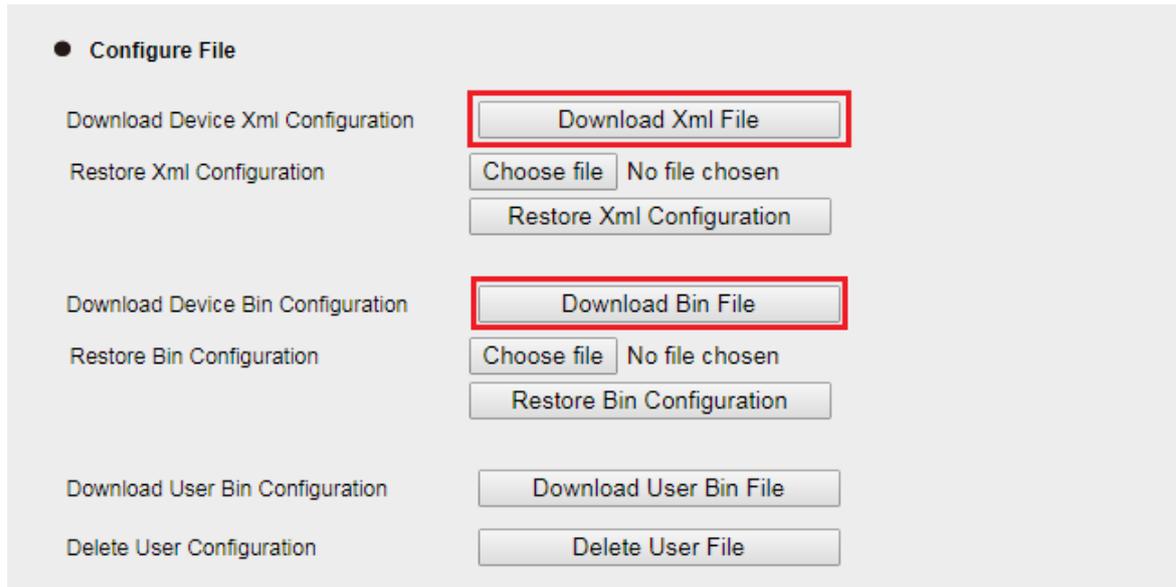


● **Configure File**

Download Device Xml Configuration	<input type="button" value="Download Xml File"/>
Restore Xml Configuration	<input type="button" value="Choose file"/> No file chosen <input type="button" value="Restore Xml Configuration"/>
Download Device Bin Configuration	<input type="button" value="Download Bin File"/>
Restore Bin Configuration	<input type="button" value="Choose file"/> No file chosen <input type="button" value="Restore Bin Configuration"/>
Download User Bin Configuration	<input type="button" value="Download User Bin File"/>
Delete User Configuration	<input type="button" value="Delete User File"/>


**To Restore a configuration file:**

1. Click Management → Configuration → Configure File


2. Select the xxx.bin or xxx.xml file, and then Click the



or



, then IP Phone will reboot.

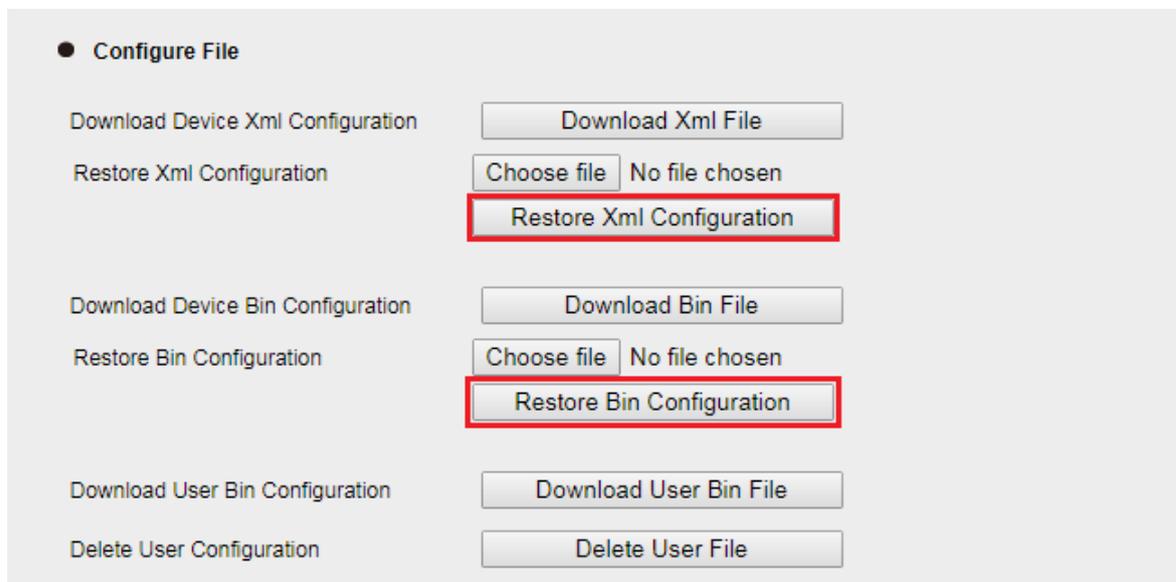

● **Configure File**

Download Device Xml Configuration	<input type="button" value="Download Xml File"/>
Restore Xml Configuration	<input type="button" value="Choose file"/> No file chosen <input type="button" value="Restore Xml Configuration"/>
Download Device Bin Configuration	<input type="button" value="Download Bin File"/>
Restore Bin Configuration	<input type="button" value="Choose file"/> No file chosen <input type="button" value="Restore Bin Configuration"/>
Download User Bin Configuration	<input type="button" value="Download User Bin File"/>
Delete User Configuration	<input type="button" value="Delete User File"/>

## Troubleshooting

### Why is the phone LCD screen blank?

- Ensure your phone is properly plugged into a functional AC outlet.
- Ensure that the phone isn't plugged into a plug controlled by a switch that is off.
- If the phone is plugged into a power strip, try plugging it directly into a wall outlet instead.
- If your phone is powered from PoE, ensure you use a PoE compliant switch or hub, or contact your system administrator for more information.
- Check if the power LED is on to ensure that the phone is powered on.

### Why does the phone display “Network Unavailable”?

#### To resolve:

- Ensure that the Ethernet cable is plugged into the Internet port on the phone and the Ethernet cable is not loose.
- Ensure that the switch or hub in your network is functioning well.
- If the problem still persists, Contact your system administrator for more information.

### Why can't I get a dial tone?

#### To resolve:

- Check for any loose connections and that the phone has been installed properly. For the Installation instructions, refer to the phone installation section.
- Check whether dial tone is present on one of the audio modes.
- Switch between the Handset, Headset (if you have) or Hands-Free Speakerphone to check whether dial tone is present for one of the audio modes.
- If the dial tone exists on another audio mode, connect a different handset or headset to isolate the problem.

### Where to set the tone?

You can set the tone on Web interface:

- Click Setting→ Tones
- Define the dial tone, ringing, busy tone...
- For the tones, you can check with your system administrator.
- For more Click [Tone Notes](#).

## How to download XML Configuration?

- Click Management→ Configuration→

## How to Import Trusted CA certificate?

- Click Management→ Trusted CA

The screenshot shows the Htek Management interface. The top navigation bar includes Home, Profile, Account, Network, Function Keys, Setting, Directory, and Management. The left sidebar contains Password, Upgrade, Auto Provision, Configuration, Trusted CA, Server CA, Tools, Restart, and Reboot. The main content area displays a table with columns: Index, Issued TO, Issued By, Expiration, and Delete. Below the table is a 'Delete' button. The configuration section includes: 'Import Trusted Certificate Files' with a 'Choose file' button and 'No file chosen' text; 'Import Trusted Certificates' button; 'Only Accept Trusted Certificates' with radio buttons for On and Off (Off is selected); 'Common Name Validation' with radio buttons for On and Off (Off is selected); 'Trusted Certificates' with radio buttons for Default Certificates, Custom Certificates, and All Certificates (Default Certificates is selected). 'SaveSet' and 'Cancel' buttons are at the bottom. A 'NOTE' box on the right states: 'Trusted CA: you can import TLS certificate file here.'

## How to Import Server CA certificate?

- Click Management → Server CA

The screenshot shows the Htek Management interface for the Server CA configuration page. The top navigation bar and left sidebar are the same as in the previous screenshot. The main content area displays a table with columns: Issued TO, Issued By, Expiration, and Delete. Below the table is a 'Delete' button. The configuration section includes: 'Import Server Certificate Files' with a 'Choose file' button and 'No file chosen' text; 'Import Server Certificates' button; 'Device Certificates' with radio buttons for Default Certificates and Custom Certificates (Default Certificates is selected). 'SaveSet' and 'Cancel' buttons are at the bottom. A 'NOTE' box on the right states: 'Trusted CA: you can import TLS certificate file here.'

## How to use Vlan?

- For Vlan information, please click [VLAN Note](#)

## How to use LLDP?

- For LLDP information, please click [VLAN Note](#)
- VLAN Notes including:
  1. Voice VLAN
  2. Major Benefits of Using VLANs
  3. VLAN discovery method on Htek ip phones
  4. LLDP Feature on Htek IP Phones
  5. Supported TLVS of IP Phones
  6. Configuring LLDP Feature
  7. DHCP VLAN
  8. Open the DHCP VLAN on the Htek IP Phones
  9. VLAN under Bridge Mode
  10. VLAN under NAT Mode

## How to Set LCD and Web GUI?

- Click [LCD and Web GUI custom Guide](#)

## How to Upgrade via FTP?

- Click [How to Upgrade Note](#)

## How to make Ringtone?

- Click [How to Make Ringtone](#)

## How to use Open VPN?

- Click [Open VPN note](#)

## Provisioning Guide on Free PBX

- Click [Set Auto Provision on FreePBX](#)

## Redundancy Server

- Click [Redundancy Server](#)

## How to Use Auto Provision Phonebook?

- Click [About AP Phonebook](#)

## All Documents

- Click [Documents Guide](#), you can get all tech files.